

jura.



Professional fine foam frother / Fine foam frother

 
- ⚠** These instructions apply to the **professional fine foam frother** and the **fine foam frother**.

The fine foam frothers can be fitted to all JURA machines featuring the Connector System[®].


Dismantling and rinsing the fine foam frother

The fine foam frother must be **dismantled and rinsed daily** if milk has been prepared to make sure it functions perfectly and also in the interests of hygiene.

- ▶ Carefully pull the fine foam frother off the Connector System[®].
- ▶ Dismantle the fine foam frother into its individual parts.

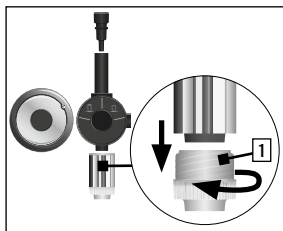

Professional fine foam frother

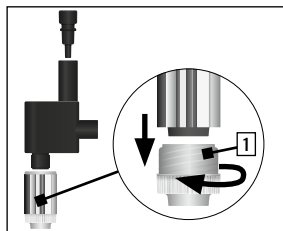 

Fine foam frother

 
- ▶ Rinse all the parts of the fine foam frother thoroughly under running water.
- ▶ Re-assemble the fine foam frother.
 - i** Ensure that all individual parts are correctly and firmly connected to ensure optimum operation.
- ▶ Firmly attach the fine foam frother to the Connector System[®].
 - i** In the interests of hygiene, we recommend changing the interchangeable milk spout **1** on a regular basis (approximately every 2 months). Replacement spouts are available from specialised dealers.

Cleaning the fine foam frother

The fine foam frother must be **cleaned daily** if milk has been prepared to make sure it functions perfectly and also in the interests of hygiene. To do this, proceed as described in your machine's instructions for use.

- i** Only use original JURA milk system cleaner. This is available from specialised dealers.

Stages of the professional fine foam frother

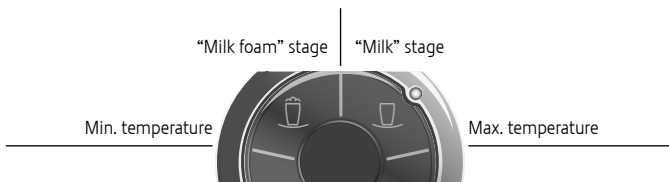

www.jura.com