

User Manual WMF Mobile Station



Accessories

English

Congratulations on the purchase of your WMF mobile station.

You will be impressed by its technical design and durability. Keep this user manual near the mobile station. You and your operating personnel can find information at any time, and know what to do in case of technical malfunctions.

In your own interest, please follow all hazard warnings and safety instructions. This will help to prevent accidents and technical malfunctions.



Please read the user manual prior to using the mobile station.

Ensure staff have access to user manual.

Important.

*Chapter 1 Introduction
Follow the User Manual Signs and Symbols.*

Observe the Safety chapter in the User Manual of your coffee machine.

Important – be sure to observe:

- User Manual Signs and Symbols
- Chapter Safety instructions



User Manual Signs and Symbols



Caution
Risk to machine.

Follow the manual



Caution
Risk to user.

Observe the user manuals safety chapter



Caution
Risk of electrocution.

Observe the user manuals safety chapter



Caution
Bruising or crushing hazard.

Observe the user manuals safety chapter



Tip
Instruction




Cross reference

User Manual Signs and Symbols	2
Chapter 1 Introduction and General Information	4
1.1 Parts of the mobile station	4
Chapter 2 General functional description	5
2.1 Versions	5
Chapter 3 Operation	6
3.1 Starting operation	6
3.2 Empty tank message	7
3.3 With water filter (optional)	7
Chapter 4 Care	8
4.1 Cleaning	8
Chapter 5 Safety instructions	9
Chapter 6 Warranty claims	10
Chapter 7 Technical data	11

Chapter 1 Introduction and General Information

1.1 Parts of the mobile station

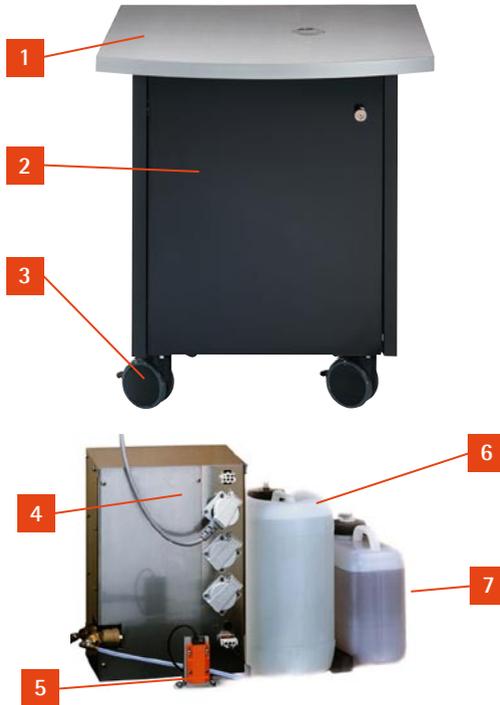

- 1 Table top
- 2 Door
- 3 Steering casters (2 lockable)
- 4 Power module (optional)
- 5 Fill level switch (sensor for fresh water tank)
- 6 Fresh water tank
- 7 Waste water tank

Chapter 2 General functional description

The mobile coffee station can be used with a compatible WMF coffee machine, independent of a water infeed and drain.

One tank for fresh water, and one tank for waste water, along with the optional WMF water filter, make this possible. The only thing needed is a power supply.

The mobile coffee station can be used with the bistro!, cafemat!, combiNation S/E, or presto! coffee machines, as well as an accessory cooler (Cup&Cool or countertop cooler) and/or a cup rack. The coffee machine sits in the middle of the cart. The cooler is always on the left, and the cup rack on the right of the machine. If there is no cooler, then the cup rack can be placed on either the left or right side of the coffee machine.



2.1 Versions

The mobile coffee station is available in two sizes. In the wide version, there are two storage compartments.

- For presto! (with integrated tank version)
- As low water pressure version (bistro!)
- Includes adapter equipment



Some of the options depend on the model.

Chapter 3 Operation

During transport, the cord must be stored in the cable feedthrough provided on the bottom of the mobile coffee station.



3.1 Starting operation

- * Open the door of the mobile station
- * Remove fresh water tank and waste water tank
- * Unscrew the lid on the fresh water tank
- * Fill the fresh water tank with clean, cold water
- * Replace the lid on the fresh water tank
- * Check that the waste water tank is empty
- * Screw the lid, with hose, on to the waste water tank
- * Replace both tanks in the mobile coffee station
- * Close the door on the mobile coffee station
- * Plug the connector into a grounded outlet
- * Switch on the coffee machine, as described in the user manual



3.2 Empty tank message

When the fresh water tank is empty, a message appears.

WMF combiNation S	Display: "Fill the water tank"
WMF bistro!	Display: "Water tank missing"
WMF cafemat!	Rapidly blinking hot water button



After the fresh water tank is filled, the message disappears, and the coffee machine is once again ready to use.

- ✳ Unscrew the lid, with hose, from the waste water tank, and clip it to the bracket on the right inside the mobile coffee station
- ✳ Remove and empty the waste water tank
- ✳ Replace the lid on the waste water tank

The waste water tank does not have a fill level message or overflow safety.

- Empty the waste water tank every time the fresh water tank is filled.
- If the fresh water tank is removed, coffee dispensing is automatically locked out.
- Remove the waste water tank only if the fresh water tank has already been removed.



3.3 With water filter (optional)

Optionally, the mobile coffee station can be run with a WMF water filter.

An angle is mounted on the bottom of the table top for ease in changing the filter. The filter head is hung on the angle to secure it during the change. To change out the water filter, see the water filter user manual.



Chapter 4 Care

4.1 Cleaning

Daily cleaning of the mobile station is done after close of business.

- * Perform the coffee machine cleaning program
- * Switch off the coffee machine
- * Unplug the mains plug from the outlet
- * Open the door
- * Remove fresh water tank and waste water tank
- * Unscrew the lids from both tanks
- * Completely empty both tanks
- * Remove any soiling and lime deposits with a brush
- * Rinse out the tanks thoroughly with hot water
- * Leave the tanks open to dry
- * Clean the mobile station using a damp cloth
- * Wipe dry using a fine woolen cloth or chamois leather

Do not clean with scouring powders or the like. There is a risk of causing scratches or scoring.



Chapter 5 Safety instructions

The hazard and safety instructions from the user manual for Type WMF Presto apply.

- Maintenance work and repairs must only be performed by WMF service personnel using original spare parts.
- Built-in safety devices must never be altered.

Caution – tipping hazard.

Push the mobile station carefully over bumps and in curves. The mobile station can tip over if used improperly.



Chapter 6 Warranty claims

During the warranty period of 12 months from transfer of risk, the purchaser has statutory warranty entitlements.

The vendor should always be afforded the opportunity to rectify faults within an appropriate period.

Claims above and beyond the above, in particular damage claims as a result of consequential damage, are excluded, to the extent that this is legally permissible.

Material defects shall be reported to the vendor immediately and in writing.

Warranty period 12 months

No warranty is provided:

- On any parts subject to natural wear and tear.
- For faults due to the effect of the weather, chemical, electrochemical or electrical effects, unless attributable to a fault on the part of WMF.
- For faults which occur as a result of failure to follow handling instructions and regulations, maintenance and care of the unit (e.g. user manuals and servicing instructions).
- For faults which occur as the result of failure to use original WMF replacement parts, or incorrect assembly by the purchaser or by third parties, or by faulty or negligent treatment.
- For the consequences of improper modifications undertaken without our consent, or by repair or reconditioning work on the part of the purchaser or by third parties.
- For faults caused by inappropriate or improper use.

Chapter 7 Technical data

Nominal power rating *	110 Watt
Mains power connection	1/ N/PE 50Hz 230V AC
On-site power connection	3 x 1.5 ² (earthed socket outlet)
On-site fuses	1 x 16 A
Fresh water tank capacity	about 25 liters
Waste water tank capacity	about 13 liters
Dimensions:	
Small top; width	850 mm
Large top; width	1,250 mm
Depth	780 mm
Height	900 mm
Weight empty	
Small top	74 kg
Large top	101 kg
Continuous sound pressure level (Lpa)**	< 70 dB (A)

We reserve the right to make technical modifications.

- * Plus nominal wattage of installed coffee machine and any add-on equipment. Data apply only if the accessory equipment is used.
- ** The A-weighted sound pressure level Lpa (slow) and Lpa (impulses) are below 70 dB (A) at the operating personnel workplace in any operating mode.



Your nearest WMF Service:

© 2009 WMF Aktiengesellschaft

All rights reserved, in particular duplication, distribution and translation rights.
No part of this manual may be reproduced in any form or processed, duplicated or distributed using electronic systems without written consent.

Design and production/typesetting and print presentation:
TecDoc GmbH; Geislingen, info@tecdocgmbh.de

Translated from the German original edition. Printed in Germany.

We reserve the right to make technical modifications.

12.03.2009