

## User Manual



Coffee machine

# 1100S

English

01.01.001

## **Congratulations on the purchase of your WMF coffee machine.**

The WMF 1100 S coffee machine is a fully automatic single-cup machine for espresso, café crème, cappuccino, milk coffee, latte macchiato, milk foam, and hot water.

With its optionally available powder hopper, the WMF 1100 S can also make hot chocolate with milk or milk foam.



### **Follow the User Manual**



- > Read the User Manual carefully prior to use.
  - > Please refer to the User Manual, paying special attention to the safety instructions and Safety chapter.
  - > Follow the warning instructions on the coffee machine.
  - > Ensure that the staff and all users have access to the User Manual.
- 

### **CAUTION**

*Follow the User Manual signs and symbols*  
▷ page 20  
*Follow the Safety chapter*  
▷ starting on page 7



### **Hazard to life due to electrical shock**



- The voltage inside the coffee machine is a hazard to life.
  - > Never open the housing.
  - > Never loosen the screws, and do not remove any housing parts.
- 

### **WARNING**

*Follow the Safety chapter*  
▷ starting on page 7



### **Conditions for use and installation**

- In the event of failure to comply with maintenance information and the specifications in the Technical Data chapter, no liability is accepted for any resultant damage.
  - > Follow the User Manual.
  - > Maintenance and repair work may be performed only by the WMF Service-Center, using original spare parts.
- 

### **IMPORTANT**

*Technical data*  
▷ starting on page 108  
*Maintenance*  
▷ starting on page 95

|          |   |           |
|----------|---|-----------|
| <b>1</b> | <b>Safety</b>                                   | <b>7</b>  |
| 1.1      | General safety instructions                     | 7         |
| 1.2      | Intended use                                    | 14        |
| 1.3      | Conditions for use and installation             | 17        |
| <b>2</b> | <b>Introduction</b>                             | <b>18</b> |
| 2.1      | Parts of the coffee machine                     | 18        |
| <b>3</b> | <b>Start-up</b>                                 | <b>22</b> |
| 3.1      | Installation location                           | 23        |
| 3.2      | Unpacking                                       | 23        |
| 3.3      | Start-up program                                | 24        |
| <b>4</b> | <b>Operation</b>                                | <b>26</b> |
| 4.1      | Operation safety instructions                   | 26        |
| 4.2      | Switch on the coffee machine                    | 26        |
| 4.3      | Beverage dispensing                             | 27        |
| 4.4      | Selection pads (optional)                       | 27        |
| 4.5      | Special buttons (optional)                      | 27        |
| 4.6      | Connect up the milk                             | 28        |
|          | Milk nozzle .....                               | 28        |
|          | With WMF milk cooler .....                      | 28        |
|          | Milk lance (optional) .....                     | 29        |
| 4.7      | Milk or milk foam dispensing                    | 29        |
| 4.8      | Hot water dispensing                            | 30        |
| 4.9      | Basic Steam (optional)                          | 30        |
| 4.10     | Cup table                                       | 33        |
| 4.11     | Bean hopper / powder hopper                     | 33        |
| 4.12     | Manual insert                                   | 34        |
| 4.13     | Grounds container                               | 35        |
| 4.14     | Grounds disposal through the counter (optional) | 35        |
| 4.15     | Drip tray                                       | 36        |
| 4.16     | Constant water supply (optional)                | 37        |
| 4.17     | Switch off the coffee machine                   | 37        |
| <b>5</b> | <b>Software</b>                                 | <b>38</b> |
| 5.1      | Overview  | 38        |
|          | Ready to operate .....                          | 38        |
|          | "Ready to operate" display pads .....           | 38        |
|          | Main menu functions .....                       | 39        |
|          | Menu control pads .....                         | 39        |
| 5.2      | Ready to operate                                | 40        |
| 5.2.1    | "Ready to operate" display pads .....           | 40        |
|          | Beverage buttons .....                          | 40        |
|          | "Warm rinse" pad .....                          | 40        |
|          | Barista pad - coffee strength .....             | 40        |
| 5.2.2    | SteamJet cup warmer .....                       | 41        |

## Table of Contents

---

|             |   |    |
|-------------|---|----|
| <b>5.3</b>  | <b>Care</b>   | 42 |
|             | System cleaning                                     | 42 |
|             | Mixer rinsing                                       | 42 |
|             | Milk system rinsing                                 | 42 |
|             | CleanLock   | 43 |
|             | Instructions  | 43 |
|             | Filter change                                       | 43 |
|             | Descaling   | 44 |
|             | Brewer care   | 44 |
| <b>5.4</b>  | <b>Beverages</b>                                    | 44 |
|             | General information                                 | 44 |
|             | Cup volume, multiple brewing, and dispensing option | 45 |
|             | Change recipes                                      | 47 |
|             | Text and picture                                    | 50 |
| <b>5.5</b>  | <b>Operating options</b>                            | 51 |
|             | Operating elements                                  | 51 |
|             | Button layout                                       | 54 |
|             | PostSelection                                       | 54 |
|             | Display mode  | 54 |
|             | Caffeine-free                                       | 55 |
|             | Beverage pre-selection                              | 55 |
|             | Decaf factor  | 55 |
| <b>5.6</b>  | <b>Information</b>                                  | 56 |
|             | Last brewing cycle                                  | 56 |
|             | Timer   | 56 |
|             | Service   | 56 |
|             | Care  | 56 |
|             | Filter and descaling                                | 56 |
|             | Journal   | 56 |
| <b>5.7</b>  | <b>Accounting</b>                                   | 57 |
|             | Counters  | 57 |
|             | Vending machines                                    | 57 |
| <b>5.8</b>  | <b>PIN rights</b>                                   | 58 |
|             | Cleaning PIN  | 58 |
|             | Settings PIN  | 58 |
|             | Accounting PIN                                      | 58 |
| <b>5.9</b>  | <b>Timer</b>  | 59 |
|             | Time / date   | 59 |
|             | Button layout state                                 | 59 |
|             | Button layout overview                              | 59 |
| <b>5.10</b> | <b>System</b>                                       | 60 |
|             | Milk and foam                                       | 60 |
|             | Progress indicator                                  | 60 |
|             | Display and illumination                            | 60 |
|             | Beverages: Font + colour                            | 62 |
|             | Water filter  | 62 |
|             | Eco mode  | 63 |
|             | Temperature   | 64 |
|             | Switch-off rinsing                                  | 64 |
|             | Automatic milk system rinsing                       | 64 |
|             | Beans empty message calibration                     | 64 |
|             | Drip tray sensor                                    | 65 |

|             |   |    |
|-------------|---|----|
|             | Antifreeze / transport preparation .....                          | 65 |
|             | Portioner .....   | 65 |
|             | S-M-L Function .....  | 66 |
|             | Bluetooth (optional) .....  | 66 |
| <b>5.11</b> | <b>USB</b> .....  | 67 |
|             | Load recipes .....  | 67 |
|             | Load beverage symbols .....                                       | 67 |
|             | Save recipes .....  | 67 |
|             | Export counters .....   | 67 |
|             | HACCP export .....  | 68 |
|             | Data backup .....   | 68 |
|             | Load data .....   | 68 |
|             | Load language .....   | 68 |
|             | Firmware update .....   | 68 |
|             | System recovery .....   | 68 |
| <b>5.12</b> | <b>Eco mode</b> .....   | 69 |
|             | Eco mode display .....  | 69 |
| <b>5.13</b> | <b>Language</b> .....   | 70 |
| <b>6</b>    | <b>Other settings</b> .....                                       | 71 |
| <b>6.1</b>  | <b>Set grinding degree</b> .....                                  | 71 |
| <b>7</b>    | <b>Care</b> .....   | 72 |
| <b>7.1</b>  | <b>Care safety instructions</b> .....                             | 72 |
| <b>7.2</b>  | <b>Cleaning intervals overview</b> .....                          | 74 |
| <b>7.3</b>  | <b>Dishwasher-safe parts</b> .....                                | 75 |
| <b>7.4</b>  | <b>Cleaning programs</b> .....                                    | 75 |
|             | 7.4.1 System cleaning .....                                       | 75 |
|             | 7.4.2 Mixer rinsing .....   | 77 |
|             | 7.4.3 Milk system rinsing .....                                   | 77 |
| <b>7.5</b>  | <b>Descaling</b> .....  | 78 |
| <b>7.6</b>  | <b>Manual cleaning</b> .....                                      | 80 |
|             | 7.6.1 Clean the operating panel (CleanLock) .....                 | 80 |
|             | 7.6.2 Clean the grounds container (grounds chute, optional) ..... | 80 |
|             | 7.6.3 Clean the catch pan .....                                   | 81 |
|             | 7.6.4 Clean the water tank .....                                  | 81 |
|             | 7.6.5 Clean the drip tray .....                                   | 82 |
|             | 7.6.6 Clean the housing .....                                     | 83 |
|             | 7.6.7 Clean the spout manually .....                              | 83 |
|             | 7.6.8 Clean the brewing unit .....                                | 84 |
|             | 7.6.9 Clean the milk system manually .....                        | 87 |
|             | 7.6.10 Clean the mixer .....                                      | 89 |
|             | 7.6.11 Clean the bean hopper .....                                | 90 |
|             | 7.6.12 Clean the powder hopper .....                              | 91 |
| <b>8</b>    | <b>HACCP cleaning schedule</b> .....                              | 93 |

## Table of Contents

---

|           |  |            |
|-----------|--|------------|
| <b>9</b>  | <b>Maintenance and descaling</b>             | <b>95</b>  |
| 9.1       | Maintenance                                  | 95         |
| 9.2       | WMF Service                                  | 96         |
| <b>10</b> | <b>Messages and instructions</b>             | <b>97</b>  |
| 10.1      | Messages for operation                       | 97         |
| 10.2      | Error messages and malfunctions              | 98         |
| 10.3      | Errors without error message                 | 101        |
| <b>11</b> | <b>Safety and warranty</b>                   | <b>103</b> |
| 11.1      | Hazards to the coffee machine                | 103        |
| 11.2      | Directives                                   | 105        |
| 11.3      | Duties of the owner / operator               | 106        |
| 11.4      | Warranty claims                              | 107        |
|           | <b>Appendix: Technical data</b>              | <b>108</b> |
|           | Technical data for coffee machine            | 108        |
|           | <b>Appendix: Accessories and spare parts</b> | <b>112</b> |
|           | <b>Index</b>                                 | <b>114</b> |

# 1 Safety

---



## Misuse

- Failure to follow the safety instructions can result in death or serious injury.
  - > Follow all the safety instructions.
- 

 **WARNING**

## 1.1 General safety instructions

### Hazards to the operator

At WMF, safety is one of the most essential product features. The effectiveness of the safety devices can only be ensured if the following points are observed:



- > Read the User Manual carefully prior to use.



- > Do not touch hot machine components.



- > Do not use the coffee machine if it is not working properly or if it is damaged.
- > Use the coffee machine only when it is completely assembled.

 **CAUTION**



> Built-in safety devices must never be altered.



> This device can be used by children of age 8 years or older while under continuous supervision, as well as



by persons with reduced physical, sensory, or mental capabilities or lack of experience or knowledge, once they have been instructed in the safe use of the machine and the risks associated with it.

> Children must not play with the device.

> Cleaning and user maintenance must not be performed by children.

---

 **CAUTION**

Despite the safety devices, every coffee machine poses potential hazards if incorrectly used. Please observe the following instructions when using the coffee machine so as to prevent injury and health hazards:





## **Hazard to life due to electrical shock**



**WARNING**



- The voltage inside the coffee machine is a hazard to life.
  - > Never open the housing.
  - > Never loosen the screws, and do not remove any housing parts.
  - > Avoid damage to the power cord. Do not kink or crush it.
  - > Never use a damaged power cord. A damaged power cord must be replaced by the manufacturer or a service representative in order to prevent a hazard.
  - > Never immerse the mains plug in water or other liquids. Never pour water or other liquids over the mains plug. Always keep the mains plug dry.
  - > Do not unplug the equipment's plug on the rear of the coffee machine until the power cord has been unplugged from the mains.
  - > The coffee machine must be disconnected from the power supply prior to maintenance and repair work. Pull out the plug to do so. The person performing the maintenance or repair must always be able to check, with a clear line of sight, that the power supply has been disconnected.



### **Burn hazard / scalding hazard**

 **CAUTION**



- When dispensing beverages and steam, hot liquid comes out of the spouts. The adjacent surfaces and spouts become hot.



- > When dispensing beverages and steam, do not reach beneath the spouts.
  - > Do not touch the spouts immediately after dispensing.
  - > Always place an appropriate cup under the spout before dispensing a beverage.
- 



### **Risk of injury**

 **CAUTION**

- Long hair could become caught in the grinder head and drawn into the coffee machine.
  - > Always protect hair with a hairnet.
-



---

### **Bruising or crushing hazard / risk of injury**



- The coffee machine contains moving parts that can cause finger or hand injury.
    - > Always switch off the coffee machine and unplug the mains plug before reaching into the coffee grinder or opening brewing unit.
- 

 **CAUTION**



---

### **Health hazard**

- > Only use products that are suitable for consumption and for use with the coffee machine.
  - > The powder hopper, bean hopper, and manual insert may only be filled with materials for the use intended.
- 

 **CAUTION**



### Health hazard

- The milk system cleaner and cleaning tablets are irritants.
    - > Follow the protective measures on the packaging of the cleaning agent.
    - > Only put in a cleaning tablet when an appropriate message is displayed.
- 

 **CAUTION**



### Health hazard / irritation and scalding hazard



- During cleaning, hot cleaning solution and hot water run out of the spouts.
  - Hot liquids can irritate the skin, and the heat poses a burn hazard.
  - The drip tray may contain hot liquids.
    - > Never reach under the spouts while cleaning.
    - > Ensure that no one drinks the cleaning solution.
    - > Be careful when moving the drip tray.
- 

 **CAUTION**



### Slipping hazard



- Fluids can be discharged from the coffee machine if used improperly or if errors occur. These fluids can cause a slipping hazard.
  - > Regularly check the coffee machine for leaks, and make sure no water is coming out.
- 

 **CAUTION**

## 1.2 Intended use

---



### Misuse

 **WARNING**

- If the machine is used other than as intended, this could lead to a risk of injury.
    - > The coffee machine must only be used as intended.
- 

- The WMF 1100 S is designed to dispense beverages made with coffee and/or milk and/or powder (such as Choc or topping) into suitable containers.
- The coffee beans, milk, topping, and chocolate powder products must be suitable for processing in a fully automated coffee machine. The products must not be processed after their expiration date.
- This device is intended for industrial and commercial use and should be operated by experts or trained users in stores, offices, restaurants, hotels, or similar places. It can also be used in a domestic environment.

### Installation location

- The device can be used as a self-service device if it is supervised by trained personnel.

The machine must be set up so as to allow good visual access.
- The device must be placed and leveled on a horizontal, sturdy, water-resistant, and heatproof base.

- The device must not be cleaned using a water jet. The device must be installed where it is protected against water spray.
- The device must not be located on a surface that is sprayed or cleaned with a water hose, steam jets, steam cleaner, or similar devices.

## Water supply

- 3/8 inch hose connector with water mains tap, and filter with 0.08 mm mesh size, on-site. At least 0.2 MPa (2 bar) supply pressure at 2 l/min Maximum 0.6 MPa (6 bar).  
Maximum inlet temperature 35 °C.
- The set of hoses provided with the new coffee machine and/or the new water filter must be used. Do not use the old set of hoses.

## Ambient temperature

- Ambient temperature +5 °C to a maximum of +35 °C

## Usage

- The use of the device is subject to this User Manual. Any other use or use that goes beyond the aforementioned is considered incorrect use. The manufacturer shall not be liable for any damage resulting from this.
- **Under no circumstances may the WMF 1100 S be used to dispense and heat liquids other than coffee, hot water (beverages, cleaning) or milk (cooled, pasteurised, homogenised, UHT).**

## Hygiene

- The coffee machine must be set up by the operator such that care and maintenance can be performed without hindrance.
- In office / floor kitchen areas or similar self-service set-ups, only staff instructed in operation of the coffee machine should supervise the coffee machine. Trained personnel should carry out care procedures and be available for questions regarding use.



---

## 1.3 Conditions for use and installation

---



### Risk of fire and accidents

- > The conditions for use and installation listed in the "Technical Data" chapter must be met.
  - > Before inserting the device plug, ensure that the information on the rating plate matches the mains voltage for the installation.
- 



 **WARNING**

*Technical data*  
▷ *starting on*  
*page 108*

Any necessary on-site preparatory work for electricity, water, and drainage connections at the customer's premises is to be arranged by the machine owner / operator. The work must be carried out by authorised installation technicians in compliance with general, country-specific and local regulations. The WMF Service engineers must only connect the coffee machine to existing prepared connection points. WMF Service is neither authorised nor responsible for carrying out any on-site installation work prior to connection.

## 2 Introduction

### 2.1 Parts of the coffee machine

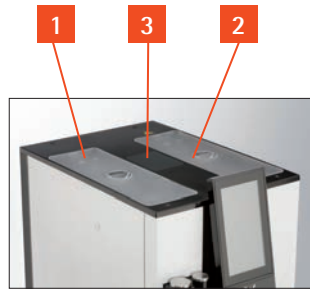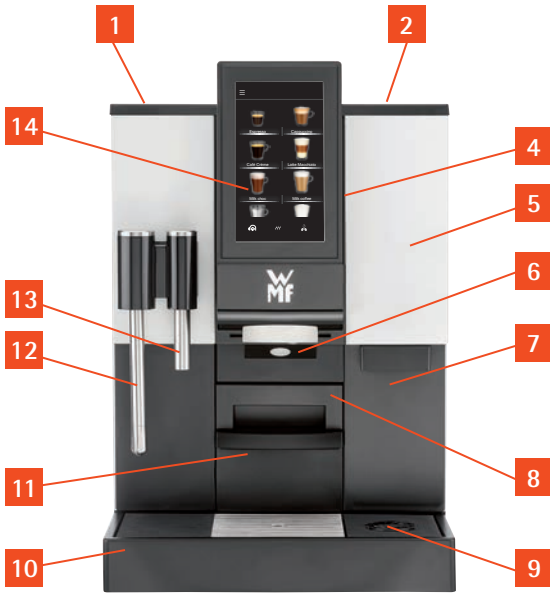

### Display



- 1 Bean hopper
- 2 Second bean hopper or powder hopper  
(Choc or topping, or double powder hopper) (optional)
- 3 Manual insert / tablet insert
- 4 ON/OFF switch
- 5 Door
- 6 Beverage spout (coffee, milk, and Choc)
- 7 Water tank
- 8 Cup table
- 9 SteamJet cup warmer
- 10 Removable drip tray with drip grid
- 11 Grounds container
- 12 Steam outlet
- 13 Hot water spout
- 14 Touch display for beverage buttons and settings

### **"Ready to operate" display**

- 15 Menu pad (opens the main menu)
- 16 Eco mode display
- 17 Message pad
- 18 Barista pad
- 19 Cup volume
- 20 "Warm rinse" pad
- 21 SteamJet pad
- 22 Steam button in beverage pad

## User Manual Signs and Symbols

---



### Personal injury safety instructions

If the safety instructions are not followed, this could lead to mild to severe injury in case of improper use.

---



### WARNING

Follow the Safety chapter  
▷ starting on page 7



### Personal injury safety instructions

If the safety instructions are not followed, this could lead to mild injury in case of improper use.

---



### CAUTION

Operation safety instructions  
▷ page 26

Care safety instructions  
▷ page 72

Follow the Safety chapter  
▷ starting on page 7



**Electrocution**



**Hot steam**



**Bruising or  
crushing hazard**



**Hot surfaces**



**Slipping hazard**

---



### Notice of property damage

- to the coffee machine
  - to the installation location
- > Always follow the User Manual.
- 

### IMPORTANT

Follow the Warranty chapter  
▷ starting on page 107

Technical data  
▷ starting on page 108



### Note / tip

- Instructions for safe use and tips for easier operation.
- 

**NOTE**

**TIP**

## Glossary

| Term                           | Explanation   |
|--------------------------------|---|
| •                              | • Listings, selection options   |
| *†                             | *† Individual steps   |
| <i>Text in italics</i>         | <i>Description of coffee machine state and/or explanations of automatic steps.</i>                                      |
| Additions                      | Components of a recipe for a beverage, in addition to coffee, such as milk, milk foam, Choc.                            |
| Barista                        | Professional coffee server  |
| Beverage dispensing            | Dispensing coffee, hot water, or powdered beverages   |
| Capacity                       | For example: the capacity of the water filter in litres   |
| Carbonate hardness             | Quoted in °dKH. The water hardness is a measure of the calcium dissolved in the drinking water.                         |
| Choc                           | Hot chocolate   |
| Coffee spout                   | Double spout  |
| Decaf                          | Decaffeinated coffee  |
| Grounds chute                  | ▷ Grounds disposal through the counter, page 35   |
| Main water supply tap          | Water stop valve, angle valve   |
| Milk system                    | Single spout, milk foamer, milk foamer adapter, steam nozzle, and milk hose   |
| Mixer system                   | Complete module, mixer with portion controller for powder beverages   |
| Powder beverages               | Such as Choc or Topping   |
| Pre-infusion                   | Prior to brewing cycle, coffee is briefly infused in order to ensure a more intense release of its aromatic substances. |
| Pressing                       | Automatic pressing of ground coffee prior to brewing cycle.   |
| Rinsing                        | Intermediate cleaning   |
| SB mode<br>(self service mode) | Self-service customer operation   |

### 3 Start-up

(For initial start-up after delivery from the factory)

---



#### Follow the User Manual



- > Read the User Manual carefully prior to use.
  - > Please refer to the User Manual, paying special attention to the safety instructions and Safety chapter.
  - > Follow the warning instructions on the coffee machine.
  - > Ensure that the staff and all users have access to the User Manual.
- 

#### CAUTION

*Follow the User Manual signs and symbols*

▷ page 20

*Follow the Safety chapter*

▷ starting on page 7



#### Hazard to life due to electrical shock



- The voltage inside the coffee machine is a hazard to life.
  - > Never open the housing.
  - > Never loosen the screws, and do not remove any housing parts.
- 

#### WARNING

*Follow the Safety chapter*

▷ starting on page 7



#### Conditions for use and installation

Follow the User Manual.

---

#### IMPORTANT

*Technical data*

▷ starting on page 108

### 3.1 Installation location



- The installation location must be dry and protected against water spray.
- Some condensate, water, or steam can always be discharged from a coffee machine.
  - > Do not use the coffee machine outdoors.
  - > Set up the coffee machine so that it is protected against water spray.
  - > Always place the coffee machine on a water-resistant and heatproof base in order to protect the installation surface against damage.

#### IMPORTANT

Follow the Warranty chapter  
▷ starting on page 107

Technical data  
▷ starting on page 108

### 3.2 Unpacking



- > Packaging material in the box contains accessories. Do not throw away.
- > Accessories are packed in the water tank and the coffee grounds container. Remove the accessories prior to start-up and rinse the coffee grounds container and water tank thoroughly.
- > Make sure that the coffee machine is intact. In case of doubt, do not start up the coffee machine, and inform the WMF Service.
- > Retain the original packaging in the event of any subsequent return.

#### IMPORTANT

Follow the Warranty chapter  
▷ starting on page 107

Accessories and identification  
of coffee machine parts  
▷ page 18

Technical data  
▷ starting on page 108



Unpacking



- Double powder hopper (optional)**
- The optional double powder hopper is shipped in a separate package. If the coffee machine is equipped with this option, the double powder hopper must be installed before commissioning the coffee machine. Operation without a hopper installed is not permitted.

#### IMPORTANT

Follow the Warranty chapter  
▷ starting on page 107

Technical data  
▷ starting on page 108

- ✱ Unpack the WMF 1100 S and place the coffee machine on a stable, horizontal surface
- ✱ Observe the technical data
- ✱ Plug the mains cable for the coffee machine into an appropriate electrical outlet

Technical data  
▷ page 108

### 3.3 Start-up program

- ✱ Switch-on the coffee machine using the ON/OFF switch


*Coffee machine switches on.*

*The start-up program starts.*

- ✱ Follow all the instructions on the display



---

 The start-up program provides a step-by-step guide through the remaining start-up steps on the display.

- > Follow the display messages.
  - The set values can be changed after start-up.

#### IMPORTANT

Change settings  
▷ Software  
starting on page 38



Start-up

#### Additional instructions

- Connect up the milk ▷ Chapter 4.6 page 28

As soon as the start-up program has run through completely and all necessary adjustments have been made, the coffee machine will restart. Calibration is performed fully automatically.



#### Burn hazard / scalding hazard



- When dispensing beverages, hot liquid comes out of the spouts. The adjacent surfaces and spouts become hot.
  - > When dispensing beverages, do not reach beneath the spouts.
  - > Do not touch the spouts immediately after dispensing.

#### CAUTION

Follow the Safety chapter  
▷ starting on page 7



## Place the water tank water filter (optional)

*This item is a step that is performed during the start-up program.*

For drinking water with carbonate hardness from 5 °dKH or higher, a WMF water filter must be fitted; otherwise, the coffee machine can be damaged due to build-up of scale.

### Determine the water hardness

- \* Request drinking water hardness reading from water supplier, or determine using WMF carbonate hardness test (complete with instructions) in the accessories

*The carbonate hardness test is supplied with the accessories.*

### Capacity

The included water filter for the water tank (BWT 200 l) can treat up to 200 litres of water at 10 °dKH.

The actual service life depends on the hardness of the drinking water supply and can be found in the following table.

| Water hardness | Capacity in litres | Water hardness | Capacity in litres |
|----------------|--------------------|----------------|--------------------|
| <5             | no filter needed   | 15             | 135                |
| above 5        | 400                | 16             | 125                |
| 6              | 335                | 17             | 120                |
| 7              | 285                | 18             | 110                |
| 8              | 250                | 19             | 105                |
| 9              | 220                | 20             | 100                |
| 10             | 200                | 21             | 95                 |
| 11             | 180                | 22             | 90                 |
| 12             | 165                | 23             | 85                 |
| 13             | 155                | 24             | 80                 |
| 14             | 145                | >25            | 70                 |

*The unit used is the "Deutsche Karbonathärte" (°dKH)*

*Filter change  
▷ Care  
page 43*

#### Note

*If the water hardness is between 0 and 5 °dKH, no water filter is needed.*

*▷ Start-up program  
page 24*

## 4 Operation

### 4.1 Operation safety instructions



#### Burn hazard / scalding hazard



- When dispensing beverages and steam, hot liquid comes out of the spouts. The adjacent surfaces and spouts become hot.



- > When dispensing beverages and steam, do not reach beneath the spouts.
- > Do not touch the spouts immediately after dispensing.
- > Always place an appropriate cup under the spout before dispensing a beverage.

 **CAUTION**

Follow the Safety chapter  
▷ starting on page 7



#### Health hazard

- > Only use products that are suitable for consumption and for use with the coffee machine.
- > The powder hopper, bean hopper, and manual insert may only be filled with materials for the use intended.

 **CAUTION**

Follow the Safety chapter  
▷ starting on page 7

### 4.2 Switch on the coffee machine

The ON/OFF switch is located on the right side of the operating panel.

※ Press the ON/OFF switch

*A signal sounds.*

*Coffee machine switches on and heats up.*

*An automatic warm rinsing starts.*

*When the coffee machine is ready to dispense beverages, the "Ready to operate" display appears.*



ON/OFF switch

### 4.3 Beverage dispensing

Touching the beverage buttons triggers dispensing of the beverage selected.

- Illuminated button = ready to dispense
- Unilluminated button / red triangle in the header bar = not ready to dispense / button disabled

- \* Place a cup of the appropriate size beneath the spout
- \* Touch the desired beverage button

#### Cancel beverage

- \* Touch the desired beverage button again

### 4.4 Selection pads (optional)

Optional buttons are available, such as the Barista pad shown here. These selection buttons appear on the display after the beverage has been selected.

### 4.5 Special buttons (optional)

Special buttons are optional and are activated in the settings if desired.


An example for a special button is the S-M-L pad. These S-M-L cup volumes need to be set for beverages in order for them to be available.

The cup volume "S" or "L" can then be selected prior to selecting a beverage, and then only those beverage buttons that have that size available will be illuminated.

M = amount of the beverage set, no pre-selection

S = approx. 25% less than M

L = approx. 25% more than M

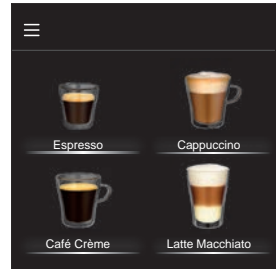


Button layout  
▷ Operating options  
page 54

Cancel beverage  
▷ Operating options  
page 55



Example:  
Barista pad

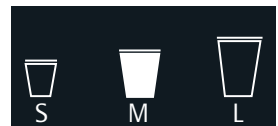

Example:  
S-M-L pad

## 4.6 Connect up the milk

### Milk nozzle

Use the correct steam nozzle on the milk foamer.

| Colour                 | Milk temperature  |
|------------------------|---|
| • green (standard)     | non-chilled milk<br>(16 °C to maximum 22 °C) <sup>(1)</sup> |
| • orange (accessories) | chilled milk<br>(to maximum 10 °C)                          |

<sup>(1)</sup> Above 10 °C, use the green nozzle.

We recommend setting the milk storage temperature at 16–22 °C for best results when using non-chilled milk.



The milk storage temperature must be adjusted to the milk temperature and suitable steam nozzle.


Milk storage temperature  
▷ Milk and foam  
page 60



Replace milk nozzle

### With WMF milk cooler

- ✧ Use the correct steam nozzle for chilled milk (orange)
- ✧ Remove the milk container from the cooler
- ✧ Push the milk container lid back
- ✧ Pour milk into the milk container
- ✧ Place the lid back on the container
- ✧ Insert the adapter on the milk hose into the connection in the milk container lid
- ✧ Push the milk container back in carefully

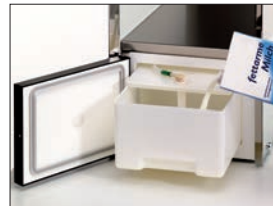

Milk container



The milk storage temperature must be adjusted to the milk temperature and suitable steam nozzle.

Milk storage temperature  
▷ Milk and foam  
page 60

## Milk lance (optional)



### Note

- Clean the milk lance daily.
- The milk hose must not be kinked.

- \* Use the correct steam nozzle on the milk foamer
- \* Place the milk packaging on the left next to the coffee machine
- \* Open the cover of the milk lance
- \* Connect the Click&Clean adapter to the milk lance
- \* Insert the milk lance into the milk pack  
*The milk lance must reach to the floor of the milk package.*

### NOTE



*The milk storage temperature must be adjusted to the milk temperature and suitable steam nozzle.*

*Milk storage temperature*  
▷ Milk and foam  
page 60

## 4.7 Milk or milk foam dispensing

- \* Place a cup of the appropriate size beneath the spout
- \* Touch the beverage button assigned to milk or milk foam

*The beverage is dispensed according to the recipe settings (dispensing option, milk foam quality, etc.)*

*Dispensing option*  
▷ Software  
▷ Beverages  
page 45

## 4.8 Hot water dispensing

- \* Place a cup of the appropriate size beneath the hot water spout
- \* Touch the hot water button

*Dispensing occurs according to the dispensing option.*



## 4.9 Basic Steam (optional)

---



### Burn hazard / scalding hazard



- When dispensing beverages and steam, hot liquid comes out of the spouts. The adjacent surfaces and spouts become hot.



- The bottom of the steam outlet gets very hot.
    - > When dispensing beverages and steam, do not reach beneath the spouts.
    - > Do not touch the spouts immediately after dispensing.
    - > Do not touch the bottom of the steam outlet.
    - > Always place an appropriate cup under the spout before dispensing a beverage.
- 

 **CAUTION**

*Follow the Safety chapter  
▷ starting on page 7*



### Note

The dispensing option for steam can be set under the "Beverages" menu item. The available dispensing options are start-stop, metered, free-flow, and start-stop freeflow. The dispensing options are described in the Beverages chapter.

---

**NOTE**

*Dispensing option  
▷ Software  
▷ Beverages  
page 45*

- \* Touch the steam button

*Steam is dispensed until the steam button is pressed again.*

- Steam warms beverages
- Steam manually foams milk

### Warm beverages

- \* Hold a cloth in front of the steam outlet to protect yourself

- \* Touch the steam button and then touch it again after one second

*This blows out the condensate water*

- \* Use as tall and slim a Cromargan® jug as possible, with handle

- \* Fill jug to no more than half way

- \* Place the steam nozzle deep into the jug, but do not touch the bottom

- \* Touch the steam button

- \* Touch the steam button again as soon as the desired temperature is reached

*This stops the steam dispensing.*

- \* Swing steam outlet over to the drip tray

- \* Touch the steam button and then touch it again after one second

*Residues in the steam outlet are rinsed out.*

- \* Wipe the steam outlet with a damp cloth

*Steam dispensing starts when the steam button is first touched. Touching the steam button a second time stops the steam dispensing.*

*A Cromargan® jug, such as WMF order number 03 9090 0030 or 03 9090 0050*

*Steam dispensing starts when the steam button is first touched. Touching the steam button a second time stops the steam dispensing.*

## Foam milk

---



> Do not overheat milk when foaming, otherwise milk foam volume decreases.

---

|            |
|------------|
| <b>TIP</b> |
|------------|

- \* Hold a cloth in front of the steam outlet to protect yourself
- \* Touch the steam button and then touch it again after a short time

*This brief jet of steam blows out the condensate water.*

- \* Use as tall and slim a Cromargan® jug as possible, with handle
- \* Fill jug to no more than half way
- \* Immerse steam nozzle into jug to just under the surface
- \* Touch the steam button

*A thick creamy milk foam results.*

- \* Swing steam outlet over to the drip tray
- \* Touch the steam button and then touch it again after a short time

*Any residue in the steam outlet is flushed out by this brief jet of steam.*

- \* Wipe the steam outlet with a damp cloth




## 4.10 Cup table

- \* Grab the handle at the top of the coffee grounds container
- \* Grab the handle of the cup table and swing it out all the way

Clearance height with cup table      max. 100 mm

Clearance height without cup table    max. 177 mm

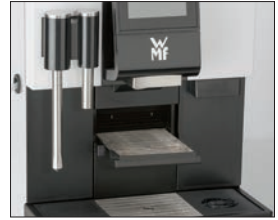

## 4.11 Bean hopper / powder hopper

If possible, refill product hoppers in advance. Fill the hoppers no more than the amount needed for one day, in order to maintain the freshness of the products. Always fill the powder hopper from front to back.



- Foreign objects can damage the grinders. Such damage is not covered under the warranty.
  - > Ensure that no foreign objects land in the coffee bean hopper.
  - > Do not overfill the powder hopper.
  - > Do not press down and compact the powder.

### IMPORTANT

Follow the Warranty chapter  
▷ starting on page 107



- Double powder hopper (optional)**  
The optional double powder hopper is shipped in a separate package. If the coffee machine is equipped with this option, the double powder hopper must be installed before commissioning the coffee machine.

### IMPORTANT

Follow the Warranty chapter  
▷ starting on page 107  
Technical data  
▷ starting on page 108



- Some types of powder can leave residue in the powder hopper, which may build up at the front of the hopper.

### NOTE

## 4.12 Manual insert

The manual insert is in the centre on the coffee machine cover.

### Manual insert is used:

- For inserting cleaning tablets
- When using additional coffee types, such as decaffeinated coffee



- Add ground coffee or cleaning tablet only after the display message.
- Use only ground coffee in the manual insert.
- Do not use water-soluble powdered coffee.  
Do not use coffee that is ground too finely.

### Coffee preparation of ground coffee using the manual insert

- \* Press the top of the manual insert lid in order to open the lid (push to open)
- \* Insert ground coffee (maximum 15 g)
- \* Close manual insert lid
- \* Touch the desired beverage button



Tablet insert

## IMPORTANT

Follow the Warranty chapter  
▷ starting on page 107



Manual insert

### 4.13 Grounds container

The grounds container receives the used coffee grounds. It has enough capacity to store coffee grounds from approx. 30 brewing cycles.

The display shows a message as soon as the grounds container needs to be emptied. Beverage dispensing is blocked for as long as the grounds container is removed.

- \* Slide the cup table into the coffee grounds container

- \* Remove grounds container

- \* Empty grounds container

*The cup table rests on the coffee grounds container. Always hold onto the cup table when emptying the coffee grounds container.*

- \* Replace grounds container

- \* Confirm process on the display



- Replacing without emptying will result in the coffee grounds container being overfilled. The coffee machine will be soiled. This may cause subsequent damage to the machine.
  - > Always empty the grounds container before replacing.
  - > If grounds container cannot be replaced, check chute for coffee residue and remove.



*Clean the grounds container*  
▷ page 80

### IMPORTANT

*Follow the Warranty chapter*  
▷ starting on page 107

### 4.14 Grounds disposal through the counter (optional)

The coffee machine can be fitted with grounds disposal through the counter. In this case, both the grounds container and the coffee machine base have an opening that passes through the on-site counter on which the machine is placed. The spent coffee grounds are collected in a separate container under the counter.

#### **Important**

*Clean grounds chute daily*  
▷ Manual cleaning  
page 80

## 4.15 Drip tray



### Scalding hazard



- The drip tray may contain hot liquids.
- > Be careful when moving the drip tray.
- > Replace carefully so that no water accidentally drips down.

For coffee machines with no drain connection, the fill level sensor indicates when the drip tray is full.

✳ Remove the drip tray carefully, empty it, and then reinsert the drip tray



On coffee machines with a drain connection the drip tray may also be removed (e.g. for cleaning).

### Drip tray sensor

A sensor monitors whether the drip tray has been inserted and the fill level. The coffee machine will indicate on the display when the maximum fill level is reached.

✳ After the display message appears, remove the drip tray carefully, empty it, and then reinsert the drip tray



The underside of the drip tray and the area around the drip tray sensor must be dry before it is inserted. The sensor is on the right, underneath the drip tray. If there is residual moisture in this area, the message, "Empty drip tray" appears again.

### CAUTION

Follow the Safety chapter  
▷ starting on page 7  
Clean drip tray daily  
▷ Care  
starting on page 72



### NOTE

### IMPORTANT



This sticker indicates the area that needs to stay dry.

## 4.16 Constant water supply (optional)

A constant water supply and drain can be connected with a retrofit kit.



With the constant water supply, the water tank may be removed only when the display shows an appropriate message, or when the machine is switched off.

### IMPORTANT

Constant water supply retrofit kit  
▷ Accessories and spare parts  
page 112

## 4.17 Switch off the coffee machine



### Take care to work hygienically

- Germs that are hazardous to health can grow in the coffee machine.
- > Perform Switch-off rinsing before switching off the coffee machine.

### CAUTION

Follow the Safety chapter  
▷ starting on page 7  
Clean the coffee machine as shown  
in the manual.  
Care  
▷ starting on page 72



### Follow the manual

- If this is not followed, the liability is invalidated in the event of any resultant damage.

### IMPORTANT

Follow the Warranty chapter  
▷ starting on page 107

The ON/OFF switch is located on the right side of the operating panel.

\* Press the ON/OFF switch briefly (approx. 1 second)

*Coffee machine switches off.*

\* Disconnect mains plug

### Coffee machines with a constant water supply

\* Turn off main water supply tap



ON/OFF switch

## 5 Software



- When adjusting beverages, the same safety instructions apply as for operating the coffee machine.  
> Follow all operation safety instructions.

### CAUTION

Operation safety instructions  
▷ page 26

### 5.1 Overview

#### Ready to operate

page 40



Button layout  
▷ Operating options  
page 54

The pads and buttons on the display are available, depending on the settings and the machine model.

#### "Ready to operate" display pads

page 40



Eco mode (active)  
page 69



Messages  
page 97



SteamJet cup warmer  
page 41



Warm rinsing  
page 40



S-M-L pad  
page 66



Barista (coffee strength)  
page 40

## Main menu functions



Care  
*page 42*



Information  
*page 56*



Beverages  
*page 44*



Operating options  
*page 51*



Accounting  
*page 57*



PIN rights  
*page 58*



Timer  
*page 59*



System  
*page 60*



USB  
*page 67*



Language  
*page 70*



Eco mode  
*page 69*



PIN access  
*page 58*

## Menu control pads



Main menu / back



PIN entry



Next / start



Load settings



Save settings



Confirm value / setting



Delete value / setting



Preparation test



Back



Show keyboard

## Messages on the display



Error message



Milk temperature display  
(optional)

## 5.2 Ready to operate

### “Ready to operate” display

The display shown when “Ready to operate” depends on the individual settings and options of the coffee machine.

Button layout  
 ▷ Operating options  
 page 54

#### 5.2.1 “Ready to operate” display pads

##### Beverage buttons

All beverage buttons that are ready to dispense are illuminated.

Swiping the display vertically brings up the rest of the beverages that are available for dispensing. Beverage dispensing starts when the desired beverage button is touched.



Example: cappuccino button

##### “Warm rinse” pad

※ Touch the “warm rinse” pad

*A rinse of the pipes with hot water starts. The water warms the brewing system and guarantees an optimum coffee temperature.*

*Recommended after a longer brewing pause, especially before dispensing a cup of espresso.*



“Warm rinse” pad active/inactive  
 ▷ Operating options  
 page 52

##### Barista pad – coffee strength

|          | Display | Coffee strength                 |
|----------|---------|---------------------------------|
| standard | 2 beans | normal, as per setting          |
| touch 1x | 3 beans | 15% stronger than the setting * |
| touch 2x | 1 bean  | 15% weaker than the setting *   |



Barista pad active/inactive  
 ▷ Operating options  
 page 51

\* Maximum quantity of ground coffee 15 g per brewing cycle

*The coffee strength will be altered for the next brewing cycle only.*



## 5.2.2 SteamJet cup warmer



### Burn hazard / scalding hazard



- Hot steam is produced by the SteamJet cup warmer. The cups and adjacent surfaces also get very hot.



- > Use heat-resistant cups.
- > Always place a cup upside-down over the cup warmer before dispensing steam.
- > Do not touch the adjacent surfaces immediately after dispensing.
- > Do not touch the spouts immediately after dispensing.
- > Never use the SteamJet function without the drip grid in place or without the cup warmer insert.

### CAUTION

Follow the Safety chapter

▷ starting on page 7

Clean drip tray daily

Care

▷ starting on page 72



### Health hazard / hygiene

- The SteamJet function is intended for warming the drinking vessel and is not intended to be used for cleaning.
- > Always use freshly washed drinking vessels when warming cups.

### CAUTION

Follow the Safety chapter

▷ starting on page 7

The SteamJet cup warmer can use steam to warm up cups.

- \* Place a cup on the cup warmer with the opening facing downward
- \* Touch the  pad

*Hot steam slowly flows into the cup from below.  
The jet of steam stays on for the time set in the settings.*


- \* Touch the SteamJet pad again
- The steam jet stops immediately.*



SteamJet pad active/inactive

▷ Operating options  
page 52


### 5.3 Care

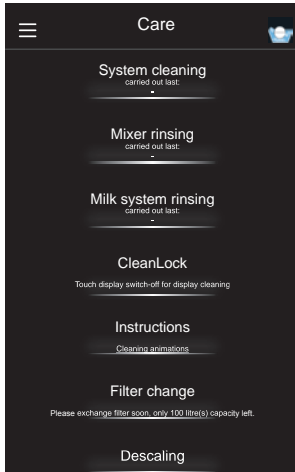

Menu control pads  
▷ Overview  
page 39  
Care  
▷ starting on page 72  
HACCP cleaning schedule  
▷ starting on page 93

#### System cleaning

 
With switch off or without switch off of the coffee machine after system cleaning. A reminder to clean the system appears automatically after 6 days or 200 brewing cycles. After 7 days or 250 brewing cycles, beverage dispensing is blocked. The machine must be cleaned before it can be used again.



System cleaning  
▷ Care  
starting on page 75

#### Mixer rinsing

 
Mixer rinsing is an intermediate cleaning of the mixer.



Mixer rinsing  
▷ Care  
page 77

#### Milk system rinsing

 The milk system rinsing rinses the milk hose, the milk nozzles, and the milk foamer.



Milk system rinsing  
▷ Care  
page 77

## CleanLock

※ Touch **CleanLock**

*A 15-second countdown starts.*

The touch display can now be cleaned.

The touch display is activated again 15 seconds after the last time it was touched.

## Instructions

Animated instructions about the available cleaning programs and for installing and removing the coffee spout, milk foamer, milk hose, mixer system, brewer change, water filter change, and SteamJet.

## Filter change

Once the remaining filter life reaches 25%, the remaining service life is displayed every time it is switched on.

When there is 0% filter life remaining, a reminder that the water filter needs to be replaced is displayed every 3 hours.

Replacing the filter is necessary to prevent damage to the machine.

※ Change the filter

※ Confirm filter change

*After filter change there is an automatic program sequence to rinse and bleed the anti-scale filter and water system. Hot water runs out of the hot water spout during this process.*



CleanLock

*Clean the display with a clean, damp cloth only. Do not use any cleaners or implements.*



Instructions

 


Filter change

*Follow the water filter instructions.  
Displays lead step by step through the program.  
Follow the instructions.*

## Descaling

The water hardness, flow rate, and whether a water filter is used are the factors that determine the number of litres remaining before descaling is required. This litres indication is calculated and displayed by the WMF 1100 S.




*Descaling chapter*  
▷ starting on page 78

## Brewer care

 After 15,000 brewing cycles, the O-ring on the brewer needs to be replaced.

When the service life has been exceeded, the fact that it is due for replacement is reported daily.

- \* Replace O-ring
- \* Confirm the change



*Brewer care*

## 5.4 Beverages

### General information

#### Dispensing test

For many beverage settings, it is possible to start a dispensing test with the new settings before the recipe is saved.

- \* Modify the settings as desired
- \* Touch the "Dispensing test" pad

*The beverage is dispensed using the newly changed values.*

- \* If the beverage is as desired, touch the Save symbol  
*The recipe is saved.*

#### Save recipes

The modified recipe is saved here.



*Example: cappuccino button*



## Load recipes

A saved recipe is loaded to a beverage button here.

- \* Touch a beverage button
- \* Touch the "Load recipes" pad

*A submenu opens.*

- \* Mark the desired recipe
- \* Touch the "Save recipes" pad

*The beverage button is assigned to the newly selected recipe.*



## Cup volume, multiple brewing, and dispensing option



### Cup volume

Set the desired cup volume. The recipe is adjusted accordingly.

100% indicates the previously saved value.

### Cup table animation

The "Cup table" animation is displayed after the beverage is selected, if it has been activated before under cup volume.

- \* Touch the desired beverage button

*The animation is shown on the display.*

- \* Press the green checkmark
- \* The beverage is dispensed

## S-M-L Function

The S-M-L function can be activated in the System menu. The cup volume can also be set to a different general level for all beverages using the operating options.

For individual beverages that deviate from the standard, the S-M-L quantity can be changed under cup volume.

Each size can also be individually set to active or inactive. Inactive means that the size no longer appears as a selection for the individual beverage.

Activate S-M-L and make a change for all beverages  
 ▷ System  
 ▷ S-M-L  
 page 66

Special buttons  
 ▷ Operation  
 page 27

### Cup volume S-M-L

The recipes for the sizes S and L are generated. M is as set.

Default value:

S = 25% less than the setting.

L = 25% more than the setting.

|   | S  | M  | L  |
|---|--|--|--|
|   | 72   | 97   | 122  |
|   | 73   | 98   | 123  |
|   | 74   | 99   | 124  |
| % | 75   | 100  | 125  |
|   | 76   | 101  | 126  |
|   | 77   | 102  | 127  |
|   | 78   | 103  | 128  |
|   | <input checked="" type="checkbox"/> S-active | <input checked="" type="checkbox"/> Active | <input checked="" type="checkbox"/> L-active |

Change S-M-L for individual beverages  
 ▷ Cup volume

### Multiple brewing cycles

The beverage is brewed several times, as set. Up to 12 times the set quantity can be dispensed with one push of a button.

Available for beverages with coffee and with milk mixtures, as well as for hot water with the "metered" dispensing option.

### Dispensing option

- **Start-Stop**

The dispensing runs until the set volume is reached. The dispensing can be stopped sooner by pressing the button again.

- **Metered**

The set volume is dispensed. The dispensing option is available for milk, foam, and hot water.

- **Freeflow**

The beverage or steam is output for as long as the button is pressed and held.

- **Start-Stop-Freeflow**


A brief press of a button starts start-stop dispensing.

A longer press of the button, for more than 1 second, starts freeflow dispensing.

## Change recipes



Menu control pads  
 ▷ Overview  
 page 39

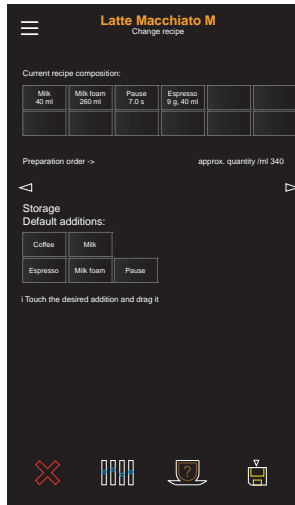

### Current recipe composition

The additions in the recipe are displayed here.  
 The sequence of preparation is from left to right.  
 Additions that are above or below each other are processed at the same time.  
 The software indicates whether desired options are not technically possible.

### Inventory of factory additions

The additions that can be used for the recipe are shown here.  
 \* Touch the desired addition and slide it into the current recipe composition

### Delete addition

Delete a marked addition from the current recipe composition.



### Change addition

✳ Mark the addition and touch the symbol "Change addition"



The **Change addition** menu opens.

The various options for the selected addition are displayed.

The saved and current data are displayed.



The current values



The values saved by Service



The factory values

### Ground coffee quantity

Enter in grams (g)



### Water quantity / milk quantity

Enter in millilitres (ml)





## Coffee quality

The quality levels influence the coffee brewing cycle. The higher the quality level, the more intensive the release of the flavor and aromatic substances in the coffee.



### Quality levels

- 1 After pressing, space is provided for the ground coffee to swell.
- 2 After pressing, the coffee is brewed immediately.
- 3 After pressing, a pre-infusion occurs.
- 4 After pressing and a pre-infusion, wet pressing occurs.
- 5 Same as for Quality 4, but with stronger wet pressing.
- 6 Same as for Quality 5, but with stronger and longer wet pressing.
- 7 Same as for Quality 6, but with stronger and longer wet pressing.

#### Note.

*If very finely ground coffee is used with a small amount of brewing water, a high quality level can cause a brewing water flow error.*

## Select grinder (optional)

The coffee grinder to be used can be selected for each recipe.

The value of 1 is assigned to the desired coffee grinder.




| Grinder 1 | Grinder 2 | Coffee powder   |
|-----------|-----------|---|
| 1         | 0         | Ground coffee from grinder 1 will be used.                                  |
| 0         | 1         | Ground coffee from grinder 2 will be used.                                  |
| 1         | 1         | The ground coffee used will be half from grinder 1 and half from grinder 2. |



"Select grinder" is available for coffee machines with two grinders.

**NOTE**


## Text and picture

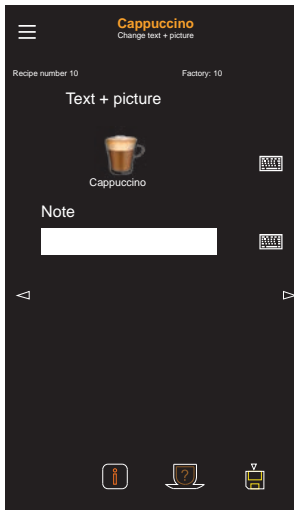

*Menu control pads*  
▷ *Overview*  
*page 39*

The beverage name and photo of a beverage button are adjusted here.  
Activate the keyboard by touching the keyboard pad.  
A note about the beverage can be saved here.

## 5.5 Operating options

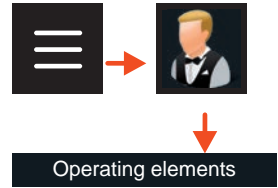

### Operating elements

#### SB mode (self-service)

For self service mode, a few functions can be switched to inactive.

These functions and their pads are not displayed in the inactive state.

Options:           • active                   • inactive

Default value:  inactive

SB mode active means that the following settings are set at the same time.

- Barista pad: inactive
- "Warm rinse" pad: inactive
- SteamJet: inactive
- Manual insert: inactive
- Beverage pre-selection: inactive
- Cancel beverage: inactive
- Menu pad: delayed
- Error message: symbol
- Cup size adjustment: inactive

#### Barista pad


Options:           • active                   • inactive

Default value:  active

active   The pad is displayed when "Ready to operate".

### “Warm rinse” pad

Options:      • active                      • inactive

Default value:  active

active    The pad is displayed when “Ready to operate”.

### Menu pad


Options:      • immediately      • delayed

Default value: immediately

immediately    The menu pad reacts immediately when the pad is touched.

### SteamJet

Options:      • active                      • inactive

Default value:  active

active    The pad is displayed when “Ready to operate”.

### Error message

The error is displayed in various colours in the header bar on the display.

Options:      • Text                              • Symbol

Default value: Text

Text    The errors are shown on the display as a text message.

### Cup size adjustment

The free selection of cup volume can be activated in the operating options.

The cup volume can be adjusted to the cup size used prior to selecting the beverage.

Options:           • active                   • inactive

Default value:  inactive


Sliding the cup on the controller to the right increases the cup volume, and sliding left reduces it.

The cup volume is indicated in percent.

Controller in the centre           100% as set

Controller all the way left       50% less

Controller all the way right      50% more

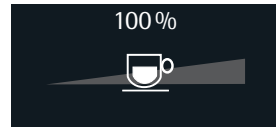

### Language pre-selection

This setting determines whether languages and flags can be set from the beverage settings. "Language pre-selection" can be activated here, or by selecting the "Self-service+Flags" button layout.

*Button layout "Self-service+Flags"*  
 ▷ *Button layout*  
 page 54

Options:           • active                   • inactive

Default value:  inactive

### Cup table animation

This setting determines whether the "Cup table animation" is enabled in the beverage settings.

 
The animation can be activated or deactivated here for all recipes defined in the beverage settings.

Options:           • active                   • inactive

Default value:  inactive

## Button layout

Various standard button layouts are saved here can be selected.



## PostSelection

Options:      • active                      • inactive

Default value:  inactive



active    The type of coffee and the amount of the beverage are requested after the beverage has been selected.

The names of the types of coffee and the sizes can be modified. (Type of coffee and S-M-L).

- Size 1                      • Portioner 1
- Size 2                      • Portioner 2
- Size 3

 
For self service mode, a few functions can be switched to inactive.

The functions and their pads are not displayed in the inactive state.

## Display mode

Options:      • single-page                      • multi-page

Default value:    • single-page



## Caffeine-free

Options:      • active                      • inactive

Default value:  inactive

active    Percentage of the ground coffee amount from the standard recipe.




Caffeine-free

## Beverage pre-selection

Options:      • active                      • inactive

Default value:  inactive

active    Previously selected beverages are dispensed without an additional button press.



Beverage pre-selection

## Cancel beverage

Options:      • active                      • inactive

Default value:  active

active    Beverage dispensing can be interrupted by pressing the beverage button again.


## Decaf factor

The value for the Decaf factor is entered here. Ground coffee quantity for Decaf (decaffeinated coffee) is set by percentage for the ground coffee quantity set in the recipe.

This setting applies to all coffee beverages with pre-selected "Decaf".

Options:      • active                      • inactive

Default value:  inactive



Decaf factor

*For a Decaf factor of 15%, café crème is brewed with 15% more ground coffee, for example, when prepared using the Decaf function.*

 
## 5.6 Information

The info menu has the following selection options, as described below.



### Last brewing cycle

Information about the last brewing cycle.



### Timer

The weekly overview of the timer opens. All switch-on and switch-off times are displayed in this overview.



 
### Service

Contact data for WMF Service.  
Serial number of the coffee machine.




### Care

The last cleaning and care actions that run via coffee machine programs are displayed here.



### Filter and descaling

 Information on the remaining capacity of the water filter and the time of the next descaling.




### Journal

Records of events and faults during operation and cleaning of the coffee machine.





## 5.7 Accounting

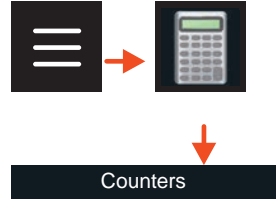

### Counters

The counters for the individual dispensed beverages and the totals of the beverages are displayed here. A journal can be saved to a USB stick.

|              |   | SML | 1  | 2   | 3    | 4 |
|--------------|---|-----|----|-----|------|---|
| Cappuccino   | M | 4   | 66 | 510 | 5900 |   |
| Cappuccino   | L | 2   | 40 | 306 | 3540 |   |
| Chociatto    | M | 9   | 48 | 416 | 4200 |   |
| Chociatto    | L | 5   | 24 | 208 | 2100 |   |
| Espresso     | M | 2   | 33 | 255 | 2950 |   |
| Hot water    | M | 3   | 44 | 340 | 3933 |   |
| Latte Mach.. | M | 2   | 33 | 255 | 2950 |   |
| Latte Mach.. | L | 2   | 26 | 204 | 2360 |   |
| Milk         | M | 1   | 17 | 128 | 1475 |   |
| coffee       | M | 3   | 53 | 408 | 4720 |   |

### Standard setting

- Counter 1 = day counter
- Counter 2 = week counter
- Counter 3 = month counter
- Counter 4 = year counter



Each counter can be reset.

**TIP**

### Vending machines

See vending machines User Manual.

## 5.8 PIN rights

One PIN can be assigned for each of the areas listed below.

- Cleaning
- Settings
- Accounting



The PINs are hierarchical.

This means, for example: the settings PIN simultaneously grants all rights for the cleaning PIN, but not the rights for the accounting PIN.

If no PIN is assigned, then the area is accessible without a PIN.

 
If a PIN has been assigned for a particular level, no access will be granted without a PIN.

### Cleaning PIN

On entering the valid PIN, access granted to:



Care



### Settings PIN

On entering the valid PIN, access granted to:



Care



Beverages



Operating options



Accounting  
(without "delete")



Timer



System



Language



USB



### Accounting PIN

On entering the valid PIN, access granted to:



Care



Beverages



Operating options



Accounting  
(with "delete")



PIN



Timer



 
System



Language



USB



## 5.9 Timer

### Time / date

The current time of day and the date are set here.


### Button layout state

Options:  active  inactive

Default value:  inactive

active Button layouts can be assigned automatically via the timer.

### Button layout overview

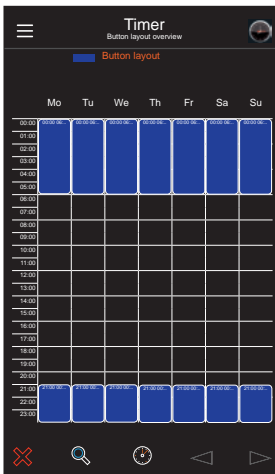

The weekly overview of all switching times for the button layout is displayed. The settings can be modified directly in the overview.



Time / date

Button layout state

Button layout overview


*For example, self-service from 21:00 to 06:00.*

*The minimum time for displaying a button layout is 30 minutes.*

## 5.10 System

### Milk and foam

The central generic values for milk and milk foam are set here. These values apply to all existing recipes. If special values for milk and milk foam are set in the recipes, they retain their validity and are not modified.

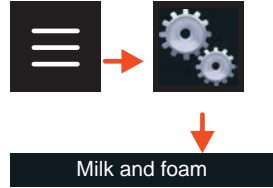

### Milk storage temperature

Options:

>16 °C = green nozzle (default) <sup>(1)</sup>

<10 °C = orange nozzle (accessories)

<sup>(1)</sup> Above 10 °C, use the green nozzle.

*We recommend setting the milk storage temperature at 16–22 °C for best results when using non-chilled milk.*

 


Replace milk nozzle

### Progress indicator

Options:           Line, circle, off

Default value:   Line



### Display and illumination

 
The display and illumination are set here.

#### Illumination

- Spout illumination

Options:           • active                   • inactive

Default value:    active



## Event display (message)

Options:      • active                      • inactive

Default value:  active

active    The illumination during a message can be adjusted.

## Display brightness

The brightness of the display is adjusted here.

### Reduce brightness automatically

Options:      • active                      • inactive

Default value:  active

active    If "Reduce brightness" is set to active, then the display brightness is reduced automatically 5 minutes after the last beverage is dispensed. If the display brightness has been dimmed, the display returns to the selected brightness level when it is first touched. The second time a beverage button is touched, the corresponding beverage is dispensed.

## Touch calibration

Recalibrate the touch display.

## Display background

The colour design for the touch display can be set here.

- Colour of the **main page**
- Colour of the **following pages**

## Beverages: Font + colour

This setting determines whether the font size and colour are allowed to be changed.

Options:      • active                      • inactive

Default value:  inactive

## Water filter

Options:      • active                      • inactive

Default value:  inactive

active      Water filter is fitted. Capacity and water hardness are queried.

## Measured carbonate hardness

Enter the measured water hardness in °dKH here.

※ Request drinking water hardness reading from water supplier, or determine using WMF carbonate hardness test (complete with instructions) in the accessories

*The carbonate hardness test is supplied with the accessories.*



If the machine is run with the wrong water hardness setting, this can lead to severe lime buildup and thus to leaking valves.

No liability is assumed for any resulting damage.

---

  
Beverages: Font + Colour

  
Water filter

### Note

*If the water hardness is between 0 and 5 °dKH, no water filter is needed.*

*For coffee machines with a constant water supply, we recommend using the bestmax V water filter.*

**NOTE**

## Measured total hardness

The total hardness can be adjusted here. This entry can be compared to previous and future measurements and helps to monitor changes in hardness.

## Filter capacity (water filter)

If the water filter is active, the filter capacity in litres is entered here.


*Water filter capacity*  
▷ page 25

## Eco mode

The Eco mode can be activated here.

Options:      • active                      • inactive

Default value:  inactive

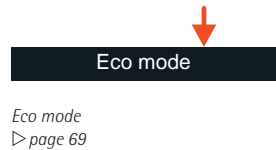

## Switch off

If Eco mode is active, the switch-off time can be set.

**Options: (never / after 30 min/60 min/90 min/  
120 min/150 min/180 min)**

**Standard: never**

The time after the last beverage is dispensed is adjusted here. If this time is exceeded, the coffee machine automatically shuts off.

 
It can be set in increments of 30 minutes.

Eco mode can be activated for a limited time using the timer.

## Temperature

### Boiler

The boiler water temperature is set here.  
(coffee brewing water temperature)



## Switch-off rinsing

Options:      • active                      • inactive

Default value:  active

 
active    When the coffee machine is switched off, the switch-off rinsing must be run if milk beverages have been dispensed since the last time the machine was cleaned.



## Automatic milk system rinsing


Options:            every 120 min, 52 hours

Default value:    52 hours



## Beans empty message calibration

 The beans empty message is recalibrated here. This must be performed as soon as the "Refill beans" message appears, even though there are still beans in the hopper.





## Drip tray sensor

The drip tray sensor monitors the fill level of the drip tray.

It prevents the drip tray from overflowing.

Options:      • active                      • inactive

Default value:  active



If the sensor is deactivated, the drip tray can be overfilled and may run over. This may cause damage to the furniture.

We recommending leaving the sensor activated.



Drip tray sensor

Operation  
Drip tray sensor  
▷ page 36

**NOTE**

## Antifreeze / transport preparation

The routine for partially emptying the boiler water system is started here.

Partially emptying is necessary prior to shipping via courier or package carrier, particularly in winter months, in order to prevent damage.



Antifreeze / transport preparation



Pack up the coffee machine

## Portioner

The names of the beans and powder varieties can be saved here, and will be displayed for selection in the "multifaceted" PostSelection mode, if the machine is equipped with more than one grinder or a double powder hopper.



Portioner

Display mode  
▷ page 54

## S-M-L Function

### Small

Standard modification factor for beverage sizes for S-recipes that are newly activated.

Default value: 75%


### Large

Standard modification factor for beverage sizes for L-recipes that are newly activated.

Default value: 125%

Options:  active  inactive

Default value:  inactive

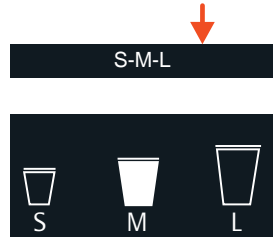

### S-M-L in PostSelection mode

Additional images and texts for beverages and sizes can be defined here and enabled for PostSelection operation.

### Bluetooth (optional)

The optional WMF Bluetooth stick is required for this function.

Options:  active  inactive

Default value:  inactive

- \* Set Bluetooth to active here
- \* Insert the WMF Bluetooth stick in the USB slot on the rear of the machine
- \* Switch the coffee machine off and on again



 
## 5.11 USB

Data exchange is possible via the USB connection. As long as the USB stick is inserted, the functions will be active. The USB port is on the left side of the display.




### Load recipes

The recipes stored on the USB stick are loaded to the coffee machine here.




### Load beverage symbols

 Photos and beverage symbols stored on the USB stick are loaded to the coffee machine here.




### Save recipes

 Current recipes are exported from the coffee machine to the USB stick here.



### Export counters

 Current counter levels are exported from the coffee machine to the USB stick here.




### **HACCP export**

The cleaning cycles performed are recorded and are exported to the USB stick here as evidence for HACCP.




### **Data backup**

 Data settings, such as machine data, beverage data, etc. are saved to the USB stick here.




### **Load data**

 Data settings, such as machine data, beverage data, etc. are loaded here from the USB stick to the coffee machine.  
(Can be protected by a PIN.)




### **Load language**

 If available, another display language can be loaded to the coffee machine from the USB stick here.




### **Firmware update**

 For Service only.



### **System recovery**

 After a firmware update, the previous version can be restored within 30 days.



## 5.12 Eco mode

If Eco mode is set to active, the steam boiler temperature is reduced 10 minutes after the last beverage is dispensed.

The beverage buttons remain lit.

If a beverage with a milk component is to be dispensed when the temperature is reduced, the coffee machine needs approx. 15 seconds to heat up.

Beverage dispensing starts after the machine has heated up.



Eco mode  
▷ page 63

### Eco mode

Options:      • active                      • inactive

Default value:  inactive



The Eco mode can be directly activated or deactivated here.

### Eco mode display

The Eco mode symbol is displayed on the in the header bar of the "Ready to operate" display.

There are two states.

#### Eco mode "active"

The coffee machine is currently in the reduce phase.



#### Eco mode "ready"

Eco mode is based on idle time, 10 minutes after the latest beverage has been dispensed.



### Immediate start

When Eco mode is set to "active," the Eco mode symbol is shown on the "Ready to operate" display.



Pressing the symbol activates Eco mode immediately. The symbol changes to "active."

### 5.13 Language

The language used in the display is set here. The available languages are displayed in English.



## 6 Other settings

### 6.1 Set grinding degree



#### **Bruising or crushing hazard / risk of injury**



- The coffee grinder contains moving parts that can cause finger injury.
- > Never reach into the grinders with coffee machine running and product hoppers removed.

**⚠ CAUTION**

Follow the Safety chapter  
▷ starting on page 7



#### **Set the grinding degree to be finer**

- The coffee grinder can become blocked if the grinding degree is changed to a much finer level all at once.
- > Adjust the grinding degree to a finer level by only one full turn of the multitool.
- > Then dispense one coffee beverage using the finer grinding level.
- > Repeat these steps as often as needed to achieve the desired grinding degree.

#### **Set the grinding degree to be more coarse**

The grinding degree can be set to a coarser level all at once, if desired.

**IMPORTANT**

Follow the Warranty chapter  
▷ starting on page 107

- ※ Initiate coffee dispensing and wait until grinder starts up
- ※ With grinder running, alter grinding degree as desired using the multitool

Grinding degree fine  Grinding degree coarse 



Multitool

## 7 Care

### 7.1 Care safety instructions

Regular cleaning is essential in order to ensure problem-free operation of the coffee machine and to ensure optimum coffee quality.



#### Health hazard / hygiene

- Milk is very sensitive. Germs that can pose a health hazard can build up in the milk system.
    - > Use the milk system rinsing to clean the milk system daily after use.
    - > Perform system cleaning at least every 7 days or 250 brewing cycles.
    - > After the system cleaning cycle has been run, the milk foamer and the steam nozzle must be cleaned manually.
    - > Replace the milk hose when needed, but no later than 6 months.
    - > Replace the mixer hose when needed.
    - > Follow all hygiene instructions.
    - > Follow the HACCP cleaning schedule.
- 

**CAUTION**

*Follow the Safety chapter  
▷ starting on page 7*



#### Health hazard / hygiene

- Germs can multiply in a coffee machine that is not in use.
    - > Perform all cleaning work before and after the machine is shut off each time.
- 

**CAUTION**

*Follow the Safety chapter  
▷ starting on page 7*





### Health hazard / hygiene

- All cleaning agents are perfectly tuned to the cleaning programs.
- > Use only WMF cleaning and descaling media.

### CAUTION

*Follow the Safety chapter  
▷ starting on page 7*



### Health hazard / irritation and scalding hazard



- During cleaning, hot cleaning solution and hot water run out of the spouts.
- Hot liquids can irritate the skin, and the heat poses a burn hazard.
- > Never reach under the spouts while cleaning.
- > Always lock out the touch display with "CleanLock" before cleaning.
- > Ensure that no one drinks the cleaning solution.

### CAUTION

*Follow the Safety chapter  
▷ starting on page 7*

## 7.2 Cleaning intervals overview

| Care                     |        |           |           |         |                                       |
|--------------------------|--------|-----------|-----------|---------|---------------------------------------|
| Daily                    | Weekly | Regularly | Automatic | Message |                                       |
| <b>Cleaning programs</b> |        |           |           |         |                                       |
|                          | x      |           |           |         | System cleaning                       |
| x                        |        |           |           |         | Mixer rinsing                         |
| x                        |        |           |           |         | Milk system rinsing                   |
| <b>Descaling</b>         |        |           |           |         |                                       |
|                          |        |           |           | x       | Descaling                             |
| <b>Manual cleaning</b>   |        |           |           |         |                                       |
| x                        |        |           |           |         | Clean the operating panel (CleanLock) |
| x                        |        |           |           |         | Clean the grounds container           |
|                          |        | x         |           |         | Clean the catch pan                   |
|                          | x      |           |           |         | Clean the water tank                  |
| x                        |        |           |           |         | Clean the drip tray                   |
| x                        |        |           |           |         | Clean the housing                     |
|                          |        | x         |           |         | Clean the spout manually              |
|                          |        |           |           | x       | Brewer care                           |
|                          |        | x         |           |         | Clean the brewing unit                |
| (x)                      | x      |           |           |         | Clean the milk system manually        |
| (x)                      | x      |           |           |         | Clean the mixer *                     |
|                          |        | x         |           |         | Clean the bean hopper                 |
|                          |        | x         |           |         | Clean the powder hopper *             |



Cleaning programs  
▷ starting on page 75

▷ page 78

▷ page 80

▷ page 80

▷ page 81

▷ page 81

▷ page 82

▷ page 83

▷ page 83

▷ page 44

▷ page 84

▷ page 87

▷ page 89

▷ page 90

▷ page 91

Daily = Daily, at least once per day and as required

Weekly = Weekly cleaning

Regularly = Regularly as required

Automatic = Automatic processing

Message = When the display shows a message

(x) = Daily for severe soiling

\* = Optional (depending on the model)

## 7.3 Dishwasher-safe parts



The parts listed in the table are safe to wash in the dishwasher.

All parts that are not listed here are not dishwasher-safe.

**IMPORTANT**

### Dishwasher-safe parts

| Designation                | Order number |
|----------------------------|--------------|
| Grounds container          | 33 2915 2000 |
| Drip tray                  | 33 4051 1000 |
| Drip grid without SteamJet | 33 4051 6100 |
| Drip grid with SteamJet    | 33 4051 6000 |
| Hopper extension, no cover | 33 2917 4000 |
| Powder hopper, no cover    | 33 2916 5000 |

## 7.4 Cleaning programs

### 7.4.1 System cleaning

The system cleaning is an automatic cleaning program and cleans the coffee system of the coffee machine with a WMF cleaning tablet.

A milk system rinsing and mixer rinsing are part of the system cleaning.

Total duration is approx. 10 minutes.

*Animated instructions*

- ▷ Coffee machine
- ▷ Main menu
- ▷ Care
- ▷ Instructions



## Health hazard / irritation and scalding hazard



- During cleaning, hot cleaning solution and hot water run out of the spouts.
- Hot liquids can irritate the skin, and the heat poses a burn hazard.
  - > Never reach under the spouts while cleaning.
  - > Always place a collection container with approx. 3 litres capacity under the spout prior to cleaning.
  - > Ensure that no one drinks the cleaning solution.

## CAUTION

Follow the Safety chapter  
▷ starting on page 7



The cleaning program provides a step-by-step guide through system cleaning on the display. Follow the messages.

## IMPORTANT

## System cleaning

### Start

\* Start the Care menu

\* Touch **System cleaning**

This query appears: "Switch off after cleaning?"

- If confirmed with **Yes**, the coffee machine switches off after cleaning.
- If confirmed with **No**, the coffee machine is restarted after cleaning.

\* Select desired option

\* Follow the information on the display



*During cleaning, a small amount of rinse water may get into the coffee grounds container. This is not an error.*

### 7.4.2 Mixer rinsing



#### Health hazard / scalding hazard

- During rinsing, hot rinsing water flows out of the spout.
- > Never reach under the spouts while rinsing.



A rinsing cycle must be run prior to commencing operation and after closing down.

Mixer rinsing can be started separately.

- \* Start the Care menu
- \* Touch **Mixer rinsing**
- \* Follow the information on the display

#### CAUTION

Follow the Safety chapter  
▷ starting on page 7

#### NOTE

Animated instructions  
▷ Coffee machine  
▷ Main menu  
▷ Care  
▷ Instructions

### 7.4.3 Milk system rinsing



#### Health hazard / scalding hazard

- During rinsing, hot rinsing water flows out of the spout.
- > Never reach under the spouts while rinsing.

The milk system rinsing can be started separately. This makes sense if there are longer periods between dispensing milk beverages.

The milk system rinsing rinses the milk hose, the milk nozzles, and the milk foamer.

- \* Start the Care menu
- \* Touch **Milk system rinsing**
- \* Follow the information on the display

#### CAUTION

Follow the Safety chapter  
▷ starting on page 7

Animated instructions  
▷ Coffee machine  
▷ Main menu  
▷ Care  
▷ Instructions

Clean milk system manually  
▷ page 87

## 7.5 Descaling



### Health hazard / irritation and scalding hazard



- During cleaning and descaling, hot cleaning solution or descaling solution flows out of the spout.
  - Hot liquids can irritate the skin, and the heat poses a burn hazard.
  - Cleaning and descaling agents can be hazardous to health upon contact or if ingested.
- > The coffee machine must be fully assembled before the descaling cycle can be started.
  - > Never reach under the spouts while cleaning or descaling.
  - > Ensure that no one drinks the cleaning solution or descaling solution.
  - > Be familiar with the product information on the bottle of descaler.
- 

**CAUTION**

*Follow the Safety chapter*  
▷ starting on page 7



### Burn hazard



- When dispensing beverages and steam, hot liquid comes out of the spouts. The adjacent surfaces and spouts become hot.
- > If the coffee machine is still hot, a cooling routine starts first. Duration of the cooling routine is 5–10 minutes.
  - > Wait until the cooling routine has finished.
- 

**CAUTION**

*Follow the Safety chapter*  
▷ starting on page 7



- WMF care products are designed and tested for use with these materials. Any other descaling agent may cause damage to the coffee machine.
  - > Use only WMF Descaling Agent.
- No liability is accepted for damage caused by the use of any other descaling agent and guarantee / warranty claims will not be recognised.

## IMPORTANT

Follow the Warranty chapter  
▷ starting on page 107



Descaling

The water hardness, the water flow, and whether a water filter is used determine the schedule for descaling. This point in time is calculated by the WMF 1100 S and displayed.

Descaling takes place in four stages.

- Cooling routine (when machine is heated up)
- Preparation
- Descaling
- Rinsing



Total duration of descaling  
is approx. 60 minutes.  
The procedure may not be  
interrupted.

### The following is needed for descaling:

- 2 bottles of WMF liquid descaling agent (0.75 litres each)
- 1 bottle of water (0.75 litres)
- 3-litres collection container



Display messages lead you step by step through the program. Start begins a sequence that must be adhered to.  
Follow the messages.

## IMPORTANT

### Access descaling program

- \* Start the Care menu
- \* Touch **Descaling**
- \* Follow the display messages

▷ Main menu  
▷ Care  
▷ Descaling

## 7.6 Manual cleaning

Order numbers for the WMF care program  
▷ Accessories and spare parts page 112

### 7.6.1 Clean the operating panel (CleanLock)

Touch "CleanLock" to start a 15-second countdown. The touch display can now be cleaned. The touch display is activated again 15 seconds after the last time it was touched.



#### Scalding hazard

- Risk of injury of beverage is started accidentally.
    - > Always lock out the touch display with "CleanLock" before cleaning.
- 

 **CAUTION**

Follow the Safety chapter  
▷ starting on page 7



- There is a risk of causing scratches or scoring.
    - > Clean the display with a clean, damp cloth only. Do not use any cleaners or implements.
    - > Use soft cloths for cleaning.
- 

**IMPORTANT**

Follow the Warranty chapter  
▷ starting on page 107

### 7.6.2 Clean the grounds container (grounds chute, optional)

※ Empty grounds container

*The cup table rests on the coffee grounds container. Always hold onto the cup table when emptying the coffee grounds container.*

- ※ Empty grounds container and rinse under running drinking water
  - ※ Clean with a clean, damp cloth
  - ※ Dry the grounds container and replace it
- 



- > Never use force. Danger of breakage.
- 

**IMPORTANT**

Follow the Warranty chapter  
▷ starting on page 107



### 7.6.3 Clean the catch pan

Remove and clean the catch pan regularly.

*A small quantity of water in the catch pan does not indicate a leak; it is due to the system.*

The catch pan is below the coffee grounds container. Clean the drip tray as needed.

- \* Remove grounds container
- \* Remove the catch pan and clean it thoroughly with clear drinking water
- \* Dry and replace the catch pan
- \* Insert the grounds container



### 7.6.4 Clean the water tank

Thoroughly rinse water tank weekly with clear water.



### 7.6.5 Clean the drip tray

---



#### Scalding hazard



- The drip tray may contain hot liquids.
  - If the drip tray is not properly engaged, such as after cleaning, there is a burn hazard due to hot liquids.
    - > Be careful when moving the drip tray.
    - > Replace carefully so that no water accidentally drips down.
    - > Always make sure the drip tray is seated correctly.
- 

- \* Lift up the front of the drip tray slightly and remove it
  - \* Remove the drip tray grid and clean it with the cleaning brush
  - \* Clean drip tray thoroughly
  - \* Clean the SteamJet spout and cover thoroughly with the included cleaning brush
  - \* Rinse the drip tray and the drip grid with clear drinking water
  - \* Dry the drip tray and the drip tray grid, reassemble and replace
- 



The underside of the drip tray and the area around the drip tray sensor must be dry before it is inserted. The sensor is on the right, underneath the drip tray. If there is residual moisture in this area, the message, "Empty drip tray" appears again.

---

#### CAUTION

Follow the Safety chapter  
▷ starting on page 7



#### IMPORTANT

## 7.6.6 Clean the housing



- There is a risk of causing scratches or scoring.
- > Do not clean with scouring powders or the like.
- > Use only very mild cleaning agents.
- > Do not use any severely alkaline, alcoholic, or degreasing cleaning agents.
- > Use soft cloths for cleaning.

- \* Switch off the coffee machine using the ON/OFF switch
- \* Allow the machine to cool off
- \* Clean the housing of the cold machine using a damp cloth
- \* Wipe dry using a fine woollen cloth

## 7.6.7 Clean the spout manually

Regularly clean the outside of the spout with a damp cloth and clean the dispensing openings with the appropriate brushes.

### IMPORTANT

Follow the Warranty chapter  
▷ starting on page 107

#### Note

Consistency problems are associated with alkaline cleaning agents, solvents such as acetone, carbon, carbon tetrachloride, paint thinner, or alcohol compounds >5%, ammonia, benzene, glycerine, xylol, abrasives, degreasing flushing agents, and strong spray cleaners for glass are also not suitable.

Clean the display with a clean, damp cloth only. Do not use any cleaners or implements.



Cleaning the coffee spout

## 7.6.8 Clean the brewing unit

---



### **Bruising or crushing hazard / risk of injury**



- The coffee machine contains moving parts that can cause finger or hand injury.
  - There is a risk of pinching when removing the brewing unit.
    - > Always switch off the coffee machine and unplug the mains plug before reaching into the coffee grinder or opening brewing unit.
    - > Hold the brewing unit tightly and remove it carefully.
- 

### **CAUTION**

Follow the Safety chapter  
▷ starting on page 7

The brewing unit should be cleaned as required.

- \* Press the ON/OFF switch until coffee machine switches off
- \* Disconnect mains plug
- \* Slide the cup table into the coffee grounds container
- \* Remove grounds container
- \* Remove the catch pan
- \* Remove the drip tray

*Brewing unit is now fully accessible.*

---



### **Burn hazard**



- The brewing unit can still be hot immediately after switching off.
    - > Allow the coffee machine to cool before cleaning.
- 

### **CAUTION**

Follow the Safety chapter  
▷ starting on page 7



- The brewing unit can slip downwards.
    - > Always hold the brewing unit securely.
    - > Never use force. Danger of breakage.
- 

### **IMPORTANT**

Follow the Warranty chapter  
▷ starting on page 107



*Clean the brewing unit*

- \* With one hand, reach into the chute under the brewing unit and release and hold the retaining catch (illustration 1)
- \* Slowly guide the brewing unit all the way down, tilt and pull forward (illustration 2)
- \* Remove the brewing unit and hold firmly

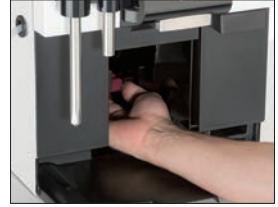


Illustration 1



Illustration 2

*Use the multitool from the accessories.*

- \* Turn the thread on the brewing unit head counter-clockwise (illustration 3) until the scraper is in the forward position
- \* Pull the springs outward and press them down  
*This unlocks the insertion chute.*



Illustration 3

- \* Swing the insertion chute [1] upwards
- \* Clean the brewing sieve under running water or with a cloth



Illustration 4

- \* Remove coffee grounds residue using a paint-brush or scrubber
- \* Rinse the brewing unit under running water

---

### Potential damage

- The brewing unit can be damaged by cleaning agent or in a dishwasher
    - > Only use water to clean the brewing unit.
    - > Never clean the brewing unit in the dishwasher.
- 

\* Dry the brewing unit with a cloth  
Allow to dry completely before reinstalling in the coffee machine.

Remove coffee grounds residue from the chute.


- \* Wipe out the coffee grounds forward or suck out using a vacuum cleaner
- \* Replace springs in insertion chute (illustration 5)  
*Use the guides.*

*Refit the brewing unit after it has been dried.*

Turn the thread at the head of the brewing unit clockwise (illustration 3) until the scraper is completely folded in again.

- \* Hold the latch down and push back the brewing unit all the way back to the back wall of the shaft
- \* Push the brewing unit upwards until it engages in the retaining catch
- \* Insert the grounds container
- \* Replace drip tray

---

 If the brewing unit cannot be inserted without resistance:

- > Turn the thread on the brewing unit head slightly to the left or right with the multitool until the brewing unit slides into the guide.
  - > Never use force. Danger of breakage.
- 

### IMPORTANT

Follow the Warranty chapter  
▷ starting on page 107



Illustration 5



Brewing sieve

### IMPORTANT

Follow the Warranty chapter  
▷ starting on page 107

## 7.6.9 Clean the milk system manually



### Scalding hazard

- Risk of injury of beverage is started accidentally.
  - > Always switch off the coffee machine prior to cleaning.
  - > Disconnect mains plug.

- \* Perform a milk system rinsing
- \* Remove the cover in front of the spouts
- \* Remove the milk foamer with the steam nozzle
- \* Disassemble the individual components and clean them thoroughly under warm running water
- \* Clean the guide in the spout with a damp cloth
- \* Clean the channels and connections with the included cleaning brush



### Health hazard

- In case of eye contact, the WMF milk system cleaner can cause severe eye injury.
  - > Ensure that the milk system cleaner never makes contact with the eyes of a person or animal.

- \* Mix 5 ml of WMF special cleaner with 0.5 litres of warm drinking water
- \* Place all components, including the cleaning brush, in the prepared cleaning solution

*All parts must be completely immersed in the cleaning solution.*



### CAUTION

Follow the Safety chapter  
▷ starting on page 7



### CAUTION

Follow the Safety chapter  
▷ starting on page 7



Clean the milk system manually

#### Note

The milk hose must also be placed in the cleaning solution when needed. Follow the manual.

Immerse the milk hose  
▷ Description below

- \* After 5 hours, clean all parts thoroughly with a brush
- \* Rinse all parts very thoroughly with clear drinking water



### Health hazard / hygiene

- > The trim strip on the spout can be removed and cleaned if needed.



### Burn hazard / scalding hazard



- The steam nozzle can blow out hot steam without the milk foamer.



- > Never install the steam nozzle without a milk foamer.

- \* Assemble the milk foamer

*Do not grease the parts for assembly, just get them damp.*

- \* Assemble the parts and press them in tightly
- \* Replace the milk foamer in the spout

### Clean the milk hose

- \* Immerse one end of the milk hose in the cleaning solution with the other parts
- \* Immerse the length of the remaining milk hose in the cleaning solution

*This procedure prevents air bubbles from remaining in the milk hose.*

*All parts must be completely immersed in the cleaning solution.*

### CAUTION

Follow the Safety chapter  
▷ starting on page 7

### CAUTION

Follow the Safety chapter  
▷ starting on page 7



"Cleaning the milk hose" instructions  
▷ Instructions  
page 43



Clean the milk hose



### 7.6.10 Clean the mixer

Cleaning will be more frequent depending on powder consumption.

- \* Perform a mixer rinsing
- \* Open the door
- \* Pull the mixer bowl forward by the handle
- \* Lift up the mixer bowl slightly to allow the rest of the water to drain out
- \* Pull off the mixer hose running from the mixer bowl to the spout and remove it from the guide

*The propeller for the mixer is now visible.*

- \* The propeller can be cleaned with a cloth
- \* Dismantle two-piece mixer bowl
- \* Clean both parts of mixer bowl and mixer hose under warm running drinking water
- \* Allow all parts to dry completely



On re-assembly, all openings must face in the same direction.

- \* Insert the mixer hose into the spout through the guide
- \* Replace mixer bowl until she engages in the lock
- \* Attach mixer hose on the mixer bowl



#### Scalding hazard

- If the mixer hose is not firmly attached, hot water or hot powder beverage can be discharged inadvertently.
- > Place the mixer hose on the mixer bowl.



*Clean the mixer*



*Replace mixer hose*



#### CAUTION

*Follow the Safety chapter  
▷ starting on page 7*

### 7.6.11 Clean the bean hopper

The permanently installed bean hoppers can be cleaned when needed and at regular intervals.

Recommendation: monthly.



#### Risk of injury

- Long hair could become caught in the grinder head and drawn into the coffee machine.
    - > Always protect hair with a hairnet.
- 

 **CAUTION**



#### Bruising or crushing hazard / risk of injury



- The coffee machine contains moving parts that can cause finger or hand injury.
    - > Always switch off the coffee machine and unplug the mains plug before reaching into the coffee grinder or opening brewing unit.
- 

 **CAUTION**

\* Press the ON/OFF switch briefly (approx. 1 second)

*Coffee machine switches off.*

\* Disconnect mains plug

\* Remove the cover from the bean hopper, empty it, and clean it with a damp cloth

\* Allow bean hoppers to dry completely

\* Refill bean hopper and close the covers

### Bean hopper extension (optional)

- \* Unlatch the extension
- \* Lift up the extension to remove it
- \* Wipe out the extension thoroughly with a damp cloth and allow to dry
- \* Replace the extension and latch it in place

### 7.6.12 Clean the powder hopper

The powder hopper should be cleaned when needed and at regular intervals.


Recommendation: monthly.

Cleaning will be more frequent depending on powder consumption.

- \* Press the ON/OFF switch briefly (approx. 1 second)  
*Coffee machine switches off.*
- \* Disconnect mains plug
- \* Remove the powder hopper lid
- \* Pull the lock behind the door to release the hopper
- \* Remove the powder hopper, empty it out, and clean it with a damp cloth
- \* Unscrew union nut at front and rear
- \* Pull out the dosing auger and remove the discharge cap



- \* Thoroughly wipe out hopper with a damp cloth
- \* Clean the individual parts of the dosing auger thoroughly, using the included cleaning brush
- \* Allow powder hopper and individual components to dry completely
- \* Re-assemble and replace the dosing auger and screw on union nuts

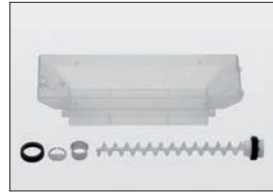

Portion controller with individual parts. Dosing auger

---

**!** Make sure the discharge cap is in the right place.


---

**IMPORTANT**

- \* Fill the powder hopper and replace the cover
- \* Close the lock

### Powder hopper extension (optional)

- \* Unlatch the extension
- \* Lift up the extension to remove it
- \* Wipe out the extension thoroughly with a damp cloth and allow to dry
- \* Replace the extension and latch it in place

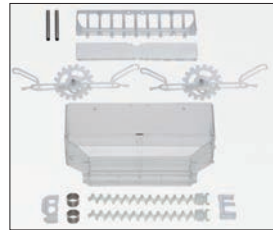

Optional equipment:  
Double powder portioner  
with individual parts.

## 8 HACCP cleaning schedule

You are required by law to ensure that your customers are not subject to any health hazards as a consequence of the consumption of the food items you serve.



A HACCP cleaning schedule (Hazard Analysis Critical Control Points) for risk identification and assessment is required. You should carry out a risk analysis on your premises. The aim of the analysis is to recognise and pre-empt food hygiene hazard points. For this purpose, monitoring and, where necessary, test procedures must be established and implemented.

With correct installation, care, maintenance, and cleaning, WMF coffee machines meet the requirements described above. If care and cleaning of the coffee machine is not carried out properly, dispensing milk beverages will constitute a food hygiene hazard point. Please observe the following points in order to comply with the HACCP cleaning schedule:

### Sanitise the milk system daily

- Follow the cleaning instructions for the milk system in the Care chapter. This will ensure that your system contains a minimum of bacteria at the beginning of operation.



You can call up the logs of the most recent cleaning operations via Information pad . The USB pad  can be used to export an HACCP record.

*"Food Hygiene Ordinance from 05.08.1997"*

*Use our HACCP cleaning schedule for monitoring of regular cleaning.*

*HACCP export  
▷ page 68*

*Use only cleaning agents that have been approved by WMF.*

*Follow the Care chapter  
▷ starting on page 72*

**TIP**

**Always commence operation with a freshly opened cooled milk pack**

- Original packaged UHT milk is usually free from harmful bacteria. Always open a new cooled milk pack at commencement of operation.
- Ensure absolute cleanliness when opening the milk pack. Germs can be introduced from dirty hands or tools when opening.

*Recommendation:*

*only use UHT milk with a 1.5% fat content.*

**Keep milk cool.**

- Always have a new cooled milk pack handy.
- If cooling is not used during operation, then the milk must be used up very quickly. Cool the milk occasionally if needed.
- If little milk is used, cooled milk must be placed in the refrigerator again during operation.

*When operation starts, milk should be at approx. 6–8 °C.*

*Depending on the setting, one litre of milk is sufficient for approx. 20 cappuccinos.*

*WMF offers a range of refrigeration options (e.g., WMF countertop coolers or WMF milk coolers).*

**HACCP cleaning schedule**

Month \_\_\_\_\_ Year \_\_\_\_\_

**Only use chilled UHT milk, to prevent health risks due to bacteria.**  
 For powder beverages, use only products that have not exceeded their expiration date.  
**Cleaning steps:**

**Daily**

1. Switch-off rinsing  
 ▷ Starts automatically when the machine is switched off.  
 Milk system rinsing and mixer rinsing are included in the switch-off rinsing cycle.
2. Clean the operating panel, grounds container, drip tray, and housing  
 ▷ User manual, Care chapter

**Weekly**

3. System cleaning
4. Clean the mixer and milk system manually  
 Clean the water tank

**Regularly**

5. Clean the product hoppers (beans / powder)  
 Clean the dispensing spouts and the brewing unit  
 ▷ User manual, Care chapter

| Date | Cleaning steps |   |   |   |   | Signature |
|------|----------------|---|---|---|---|-----------|
|      | Time           |   |   |   |   |           |
|      | 1              | 2 | 3 | 4 | 5 |           |
| 1.   |                |   |   |   |   |           |
| 2.   |                |   |   |   |   |           |
| 3.   |                |   |   |   |   |           |
| 4.   |                |   |   |   |   |           |
| 5.   |                |   |   |   |   |           |
| 6.   |                |   |   |   |   |           |
| 7.   |                |   |   |   |   |           |
| 8.   |                |   |   |   |   |           |
| 9.   |                |   |   |   |   |           |
| 10.  |                |   |   |   |   |           |
| 11.  |                |   |   |   |   |           |
| 12.  |                |   |   |   |   |           |
| 13.  |                |   |   |   |   |           |
| 14.  |                |   |   |   |   |           |
| 15.  |                |   |   |   |   |           |
| 16.  |                |   |   |   |   |           |

| Date | Cleaning steps |   |   |   |   | Signature |
|------|----------------|---|---|---|---|-----------|
|      | Time           |   |   |   |   |           |
|      | 1              | 2 | 3 | 4 | 5 |           |
| 17.  |                |   |   |   |   |           |
| 18.  |                |   |   |   |   |           |
| 19.  |                |   |   |   |   |           |
| 20.  |                |   |   |   |   |           |
| 21.  |                |   |   |   |   |           |
| 22.  |                |   |   |   |   |           |
| 23.  |                |   |   |   |   |           |
| 24.  |                |   |   |   |   |           |
| 25.  |                |   |   |   |   |           |
| 26.  |                |   |   |   |   |           |
| 27.  |                |   |   |   |   |           |
| 28.  |                |   |   |   |   |           |
| 29.  |                |   |   |   |   |           |
| 30.  |                |   |   |   |   |           |
| 31.  |                |   |   |   |   |           |

## 9 Maintenance and descaling

Please bear in mind that this is a professional industrial coffee machine which needs regular maintenance and descaling.

The maintenance schedule is based on the duration of use of the machine and is shown on the display.

The coffee machine may continue to be operated after the message, but Customer Care or contract maintenance should be carried out promptly to ensure correct functioning and so as to avoid any consequent damage.

### 9.1 Maintenance

Maintenance after a message is displayed; may only be undertaken by trained personnel or by WMF Service, as in this instance components affecting safety must be replaced.

The following care or maintenance stages are provided:

- Descaling, may be undertaken by the user / operator.
- Maintenance after a message is displayed; may only be undertaken by trained personnel or by WMF Service, as in this instance components affecting safety must be replaced.

*Service maintenance message*  
▷ Messages and instructions  
page 97

*Descaling*  
▷ Software ▷ Care ▷ Descaling  
page 78

*Service maintenance message*  
▷ Messages and instructions  
page 97

## 9.2 WMF Service

You can reach WMF Service if the local service point is not known.

WMF GmbH  
WMF Platz 1  
D - 73312 Geislingen (Steige)



### **Important**

*For other maintenance work and repairs, please contact your local WMF Service. The telephone number can be found on the address sticker on the coffee machine and on the delivery note.*




*Pack up the coffee machine*



## 10 Messages and instructions

### 10.1 Messages for operation

#### Refill beans

- \* Refill bean hopper (refer to display)
- \* Check:
  - Coffee beans do not feed through.
- \* Stir with a large spoon and confirm with 
- \* Perform the "Beans empty message calibration"

*Beans empty message calibration*  
▷ Software  
page 64

#### Open water supply valve

- \* Turn on water tap and confirm

#### Empty grounds container

- \* Empty grounds container

#### Grounds container missing

- \* Replace the grounds container correctly

#### Change water filter

- \* Change water filter  
*Follow water filter instructions.*
- \* Call WMF Service if needed

#### Note

*For coffee machines with a constant water supply, we recommend using the bestmax V water filter.*

#### Call WMF Service

Error number is displayed

*Error messages and malfunctions*  
▷ page 98

#### Service message

Service maintenance after the display shows a message.

- \* Call WMF Service

*Service messages are instructions. It is generally possible to continue operating the coffee machine.*

## 10.2 Error messages and malfunctions

Basic procedure on display of error messages or malfunctions.


- ✳ Switch off the coffee machine and on again after a few seconds
- ✳ Repeat the process which led to the error

In many cases, this eliminates the malfunction and you can continue working.

If this is not successful: find the error message or error number in the following error list and follow the sequence of actions indicated.

If this does not rectify the error or if the error indicated is not listed please call WMF Service.

Some messages lead to blocking of individual functions. You will notice this by the fact that the beverage button illumination goes out. The beverage buttons that are still illuminated can continue to be used.

Your WMF 1100 S is provided with a diagnostics program. Any errors that occur are shown on the display. The error messages listed may also be caused by an interruption to the mains electricity supply. If there is a current error or a message to the operator, the  pad is displayed.

- ✳ Touch 

*The error message and the error number are displayed.*





The ON/OFF switch reacts after about 1 second and the coffee machine switches off.

In order to clear an error, for example if the software hangs up, pressing and holding the ON/OFF switch will switch off the controller.

**NOTE**

| <i>Error number</i> | <i>Error description</i>                        | <i>Action instructions</i>   |
|---------------------|---|--|
| 6                   | Brewing unit block circuit / brewing unit stiff | <ul style="list-style-type: none"> <li>* Switch off the coffee machine</li> <li>* Clean the brewing unit</li> <li>▷ Care ▷ Clean the brewing unit, page 84</li> </ul>  |
| 88                  | Boiler: over-temperature                        | <ul style="list-style-type: none"> <li>* Switch the coffee machine off, allow to cool and switch on again</li> <li>* If error not remedied call WMF Service</li> </ul>   |
| 89                  | Boiler: heat-up time error                      | <ul style="list-style-type: none"> <li>* Switch off the coffee machine and on again</li> <li>* If error not remedied call WMF Service</li> </ul>   |
| 161                 | Flow error: brewing water                       | <p><i>Between each of the following steps switch off the coffee machine and on again. If error not remedied carry out the next step.</i></p> <ul style="list-style-type: none"> <li>* Clean the brewing unit</li> <li>▷ Care ▷ Clean the brewing unit, page 84</li> <li>* Set the grinding degree coarser</li> <li>▷ Other settings ▷ Set grinding degree, page 71</li> <li>* Reduce quality</li> <li>▷ Software ▷ Recipes, page 47</li> <li>* If error not remedied call WMF Service</li> </ul> |
| 162                 | Flow error: when cleaning                       | <p><i>Between each of the following steps switch off the coffee machine and on again. If error not remedied carry out the next step.</i></p> <ul style="list-style-type: none"> <li>* Clean the brewing unit</li> <li>▷ Care ▷ Clean the brewing unit, page 84</li> <li>* If error not remedied call WMF Service</li> </ul>  |

| Error number | Error description   | Action instructions   |
|--------------|---|---|
| 163          | Flow error:<br>warm rinsing   | <p><i>Between each of the following steps switch off the coffee machine and on again. If error not remedied carry out the next step.</i></p> <ul style="list-style-type: none"> <li>* Clean the brewing unit<br/>▷ Care ▷ Clean the brewing unit, page 84</li> <li>* If error not remedied call WMF Service</li> </ul>  |
| 186          | Steam boiler:<br>level  | <p><i>Beverage dispensing temporarily blocked.</i></p> <ul style="list-style-type: none"> <li>* Check that grounds container is correctly inserted</li> <li>* Switch the coffee machine off and on again</li> <li>* Check whether the water tank is filled</li> </ul>   |
| 188          | Heating error:<br>over-temperature  | <ul style="list-style-type: none"> <li>* Switch off the coffee machine, disconnect mains plug</li> <li>* Call WMF Service</li> </ul>  |
| 189          | Steam boiler:<br>heat-up time error   | <ul style="list-style-type: none"> <li>* Switch the coffee machine off and on again</li> <li>* If error not remedied call WMF Service</li> </ul>  |
| 9083         | Cooler temperature<br>is in the frost range   | <ul style="list-style-type: none"> <li>* Check whether the cooler temperature is set too low</li> </ul>   |
| 9516<br>9517 | Right grinder<br>blocked<br>Left grinder<br>blocked<br> |  <ul style="list-style-type: none"> <li>* Switch off the coffee machine</li> <li>* Disconnect mains plug</li> <li>* Remove bean hopper cover</li> <li>* Empty bean hoppers</li> <li>* Rotate the grinder disk clockwise or counter clockwise only by using the multitool for the hopper (two pins must be inserted in the corresponding recesses on the grinder; see illustration) until the blockage is cleared</li> <li>* Fill bean hoppers</li> <li>* Replace bean hopper cover</li> <li>* Switch on the coffee machine</li> </ul> <p>▷ Care ▷ Clean the bean hopper, page 90</p> <p>If the blockage cannot be cleared:</p> <ul style="list-style-type: none"> <li>* Set grinding degree one stage coarser</li> </ul> <p>▷ Other settings ▷ Set grinding degree, page 71</p> <ul style="list-style-type: none"> <li>* If error not remedied call WMF Service</li> </ul> |

### 10.3 Errors without error message

| Error pattern   | Action instructions   |        |                  |  |  |  |                                    |   |  |
|---|---|--------|------------------|--|--|--|------------------------------------|---|--|
| <ul style="list-style-type: none"> <li>No hot water dispensing but water in grounds container</li> </ul>                            | <ul style="list-style-type: none"> <li>✳ Clean the hot water spout</li> <li>✳ Call WMF Service (coffee dispensing possible)</li> </ul>  |        |                  |  |  |  |                                    |   |  |
| <ul style="list-style-type: none"> <li>No Choc dispensing but water in grounds container</li> </ul>                                 | <ul style="list-style-type: none"> <li>✳ Do not use Choc dispensing</li> <li>✳ Call WMF Service (coffee dispensing possible)</li> </ul>   |        |                  |  |  |  |                                    |   |  |
| <ul style="list-style-type: none"> <li>Choc portion controller blocked, Choc dispensed only with water</li> </ul>                   | <ul style="list-style-type: none"> <li>✳ Clean the portioner<br/>▷ Care ▷ Clean powder hopper, page 91</li> <li>✳ Empty powder</li> <li>✳ Turn dosing auger manually until all powder is removed</li> <li>✳ If necessary rinse with water</li> <li>✳ (Allow to) dry completely</li> </ul>   |        |                  |  |  |  |                                    |   |  |
| <ul style="list-style-type: none"> <li>Coffee dispensing on the left / right differs</li> </ul>                                     | <ul style="list-style-type: none"> <li>✳ Clean the coffee spout<br/>▷ Software ▷ Instructions ▷ Coffee spout, page 43</li> </ul>  |        |                  |  |  |  |                                    |   |  |
| <ul style="list-style-type: none"> <li>No milk foam / no milk dispensing, but milk in the milk container</li> </ul>                 | <ul style="list-style-type: none"> <li>✳ Check whether the milk hose is kinked or squashed</li> <li>✳ Check that the correct steam nozzle is being used</li> <li>✳ Re-route milk hose correctly</li> <li>✳ Clean the milk spout</li> <li>✳ Refill with milk</li> <li>✳ Check whether milk cooler is iced</li> </ul>   |        |                  |  |  |  |                                    |   |  |
| <ul style="list-style-type: none"> <li>Milk foam not OK</li> </ul>  | <table border="1" data-bbox="479 1023 1031 1276"> <thead> <tr> <th data-bbox="482 1027 736 1054">Colour</th> <th data-bbox="736 1027 1028 1054">Milk temperature</th> </tr> </thead> <tbody> <tr> <td data-bbox="482 1054 736 1121"> <ul style="list-style-type: none"> <li>green (standard)</li> </ul> </td> <td data-bbox="736 1054 1028 1121">                     non-chilled milk<br/>(16 °C to maximum 22 °C)                 </td> </tr> <tr> <td data-bbox="482 1121 736 1189"> <ul style="list-style-type: none"> <li>orange (accessories)</li> </ul> </td> <td data-bbox="736 1121 1028 1189">                     chilled milk<br/>(to maximum 10 °C)                 </td> </tr> <tr> <td colspan="2" data-bbox="482 1189 1028 1276">                     If error not remedied<br/>                     ▷ Operation ▷ Connect up the milk, page 28<br/>                     ▷ System ▷ Milk and foam ▷ Milk storage temperature, page 60                 </td> </tr> </tbody> </table> | Colour | Milk temperature | <ul style="list-style-type: none"> <li>green (standard)</li> </ul> | non-chilled milk<br>(16 °C to maximum 22 °C) | <ul style="list-style-type: none"> <li>orange (accessories)</li> </ul> | chilled milk<br>(to maximum 10 °C) | If error not remedied<br>▷ Operation ▷ Connect up the milk, page 28<br>▷ System ▷ Milk and foam ▷ Milk storage temperature, page 60 |  |
| Colour  | Milk temperature  |        |                  |  |  |  |                                    |   |  |
| <ul style="list-style-type: none"> <li>green (standard)</li> </ul>  | non-chilled milk<br>(16 °C to maximum 22 °C)  |        |                  |  |  |  |                                    |   |  |
| <ul style="list-style-type: none"> <li>orange (accessories)</li> </ul>  | chilled milk<br>(to maximum 10 °C)  |        |                  |  |  |  |                                    |   |  |
| If error not remedied<br>▷ Operation ▷ Connect up the milk, page 28<br>▷ System ▷ Milk and foam ▷ Milk storage temperature, page 60 |   |        |                  |  |  |  |                                    |   |  |

| Error pattern   | Action instructions  |
|---|--|
| <ul style="list-style-type: none"> <li>• The milk foam dispensing sputters severely</li> <li>• Milk too hot</li> </ul>                              | <ul style="list-style-type: none"> <li>* Check whether the milk system has been cleaned</li> <li>* Clean the milk system<br/>▷ Care ▷ Clean milk system manually, page 87</li> <li>* Check whether the milk has been cooled sufficiently</li> <li>* Use the green milk nozzle</li> </ul>   |
| <ul style="list-style-type: none"> <li>• No powder beverage dispensing</li> </ul>   | <ul style="list-style-type: none"> <li>* Clean the mixer bowl</li> <li>* Is the hose kinked?</li> <li>* Perform milk cleaning and rinsing more often, if necessary daily<br/>▷ Care ▷ Cleaning intervals overview, page 74<br/>▷ Care ▷ Clean milk system manually, page 87</li> <li>* Use lower powder dosage</li> <li>* Use higher water dosage</li> </ul> |
| <ul style="list-style-type: none"> <li>• The message "Empty drip tray" is displayed, even though the drip tray has already been emptied.</li> </ul> | <p>The underside of the drip tray and the area around the drip tray sensor must be dry before it is inserted. The sensor is on the right, underneath the drip tray. If there is residual moisture in this area, the message, "Empty drip tray" appears again.</p>  |
| <ul style="list-style-type: none"> <li>• Pump runs continuously, water in grounds container</li> </ul>  | <ul style="list-style-type: none"> <li>* Switch the coffee machine off and on again</li> <li>* If error not remedied call WMF Service</li> </ul>   |

## 11 Safety and warranty

### 11.1 Hazards to the coffee machine



#### Follow the manual

We do not accept any warranty for damage resulting from failure to observe this requirement.

Follow the conditions for use and installation.

#### Installation location

- The installation location must be dry and protected against water spray.
- Some condensate, water, or steam can always be discharged from a coffee machine.
  - > Do not use the coffee machine outdoors.
  - > Set up the coffee machine so that it is protected against water spray.
  - > Always place the coffee machine on a water-resistant and heatproof base in order to protect the installation surface against damage.

#### Coffee grinder

- Foreign objects can damage the grinders. Such damage is not covered under the warranty.
  - > Ensure that no foreign objects land in the coffee bean hopper.

#### IMPORTANT

*Follow the Warranty chapter*  
▷ starting on page 107

*Conditions for use and installation*  
▷ starting on page 17

Please observe the following instructions so as to prevent problems with and damage to the coffee machine:

- For drinking water with carbonate hardness from 5 °dKH or higher, a WMF water filter must be fitted; otherwise, the coffee machine can be damaged due to build-up of scale.
- For insurance reasons always ensure that, at the end of operation the mains switch is switched off or the mains plug is unplugged. For machines with a constant water supply, the water mains tap for the inlet pipe must be closed.
- We recommend damage prevention measures, such as:
  - installation of a suitable water monitor in the mains water supply line
  - installation of smoke alarms
- After shut off for several days we recommend running the cleaning program at least twice before reusing the machine.

*System cleaning*  
▷ *Cleaning programs*  
*page 75*



## 11.2 Directives

Manufacturer: WMF GmbH, 73312 Geislingen (Germany)

The device fulfils the requirements of all applicable regulations in the directives MD (MRL) 2006/42/EC, EMV directive (EMC) 2014/30/EU and RoHS 2011/65/EU.

The manufacturer indicated above declares that this machine conforms to all applicable provisions of the directives listed. Any modifications to the machines that are not approved by us will cause this declaration to become invalid.

Collecting technical documentation: WMF GmbH.

The original declaration of conformity is included with the machine. The device bears the CE mark.

The device fulfils the requirements of the German Food and Feed Code (LFGB), the Regulation on Commodities (BedGgstV), the EU regulation No. 10/2011 as well as the EC regulation No. 1935/2004 in the currently valid editions.

When used properly, the device does not present a health hazard or other unreasonable hazard.

The materials and raw materials used fulfil the requirements of the Regulation on Commodities as well as the EU regulations No. 10/2011.

Currently valid national rules apply in countries outside of the European Union.

This device is subject to the directive on waste electrical and electronic equipment WEEE 2012/19/EU and may not be disposed of as domestic waste.

Requirements traceability pursuant to EC regulation No. 1935/2004 and Good Manufacturing Practice within the meaning of EC regulation No. 2023/2006 are ensured and guaranteed.



*For disposal please contact  
WMF Service.*

*Address  
▷ page 96*

### 11.3 Duties of the owner / operator

The operator of such equipment must ensure regular maintenance by WMF Service technicians, their agents or other authorised persons, and checking of safety devices.

Access to the service area is permitted only for persons with knowledge and practical experience with the device, especially regarding safety and hygiene.

The coffee machine must be set up by the operator such that care and maintenance can be performed without hindrance.

In office / floor kitchen areas or similar self-service set-ups, only staff instructed in operation of the coffee machine should supervise the coffee machine. Trained personnel should carry out care procedures and be available for questions regarding use.

The operator shall ensure that electrical equipment and operating facilities are in a fit state (e.g., to DGUV Regulation 3) [German Accident Prevention Association or equivalent]. In order to ensure the operating safety of your coffee machine, it is essential to perform regular checks of the safety valves and the pressure containers, among other checks.

These measures are conducted by WMF Service or by WMF authorised service personnel as part of maintenance work.

System cleaning must be carried out using only the WMF special cleaning agent intended by WMF for the coffee machine (tablets), and for the milk system (cleaning liquid).

The manufacturer's specifications regarding maintenance cycles and frequency of maintenance (▷ Maintenance) must be followed.

*Cleaning intervals overview*

▷ page 74

*HACCP*

▷ page 93

*WMF special cleaning agent*

▷ *Accessories and spare parts*  
page 112

## 11.4 Warranty claims



### Follow the manual

- We do not accept any warranty for damage resulting from failure to observe this requirement.
  - > Follow the conditions for use and installation.

### IMPORTANT

*Conditions for use and installation*  
▷ starting on page 17

Whether the purchaser has any rights under warranty, and the nature of any such warranty rights that the purchaser may have, is determined by the agreement made between the purchaser and the vendor. If the requirements of this User Manual are not followed, warranty claims will not be recognised.

### No warranty is provided:

- On any parts subject to natural wear and tear. This includes seals, mixers, and brewing unit, among other items.
- For malfunctions due to the effect of the weather, scale build-up, chemical, physical, electrochemical or electrical effects.
- If a water filter is not fitted even though the local water supply requires use of a water filter and malfunctions occur as a consequence.
- If malfunctions occur as a result of failure to follow instructions for the handling, maintenance, and care of the unit (e.g., User Manual and maintenance instructions).
- With respect to faults which occur as the result of failure to use original WMF spare parts or incorrect assembly by the purchaser or by third parties or by faulty or negligent treatment.
- With respect to the consequences of improper modifications undertaken without the consent of WMF, or by repair or reconditioning work on the part of the purchaser or by third parties.
- With respect to faults caused by inappropriate or improper use.

**Important**  
*Maintenance*  
▷ page 95

## Appendix: Technical data

### Technical data for coffee machine

|                                  |   |
|----------------------------------|---|
| External dimensions              | Width 325 mm<br>Depth 561 mm<br>Housing height 460 mm<br>Height including display 500 mm<br>Height including hopper extension 556 mm  |
| Bean hopper<br>Powder hopper     | Approx. 550 g; with optional extension approx. 1,100 g <sup>(1)</sup><br>Approx. 450 g; with extension approx. 1,250 g <sup>(2)</sup>   |
| Weight empty                     | 24–28 kg (depending on the model)   |
| Water supply                     | 3/8 inch hose connector with water mains tap, and filter with 0.08 mm mesh size, on-site. <sup>(3)</sup><br>At least 0.2 MPa (2 bar) supply pressure at 2 l/min<br>Maximum 0.6 MPa (6 bar).<br>Maximum inlet temperature 35 °C.<br>The set of hoses provided with the new coffee machine and/or the new water filter must be used. Do not use the old set of hoses. |
| Water quality                    | For drinking water with carbonate hardness from 5 °dKH or higher, a WMF water filter must be fitted.  |
| Water drain tube (optional)      | Hose a minimum of DN 19, minimum downward slope of 2 cm/m   |
| Water tank volumes               | approx. 4.5 l   |
| Use at elevation above sea level | <2,000 m  |

We reserve the right to make technical modifications.

<sup>(1)</sup> *The capacity depends on the size of the coffee beans.*

<sup>(2)</sup> *Only with optional powder hopper. The capacity depends on the powder used.*

<sup>(3)</sup> *These specifications (IEC 60335–2-75) for the water connection to the coffee machine apply in EU member states. It may be necessary to also observe additional country-specific regulations. Outside the EU acceptance of the standards quoted is to be checked by the legal entity or natural person who wishes to use the coffee machine.*

|                                       |  |
|---------------------------------------|--|
| Nominal power rating                  | 1.9–2.3 kW   |
| Power supply                          | 220–240 V, 50/60 Hz, (1/N/PE)  |
| Illumination                          | LED  |
| Degree of protection                  | IP X0  |
| Protection class                      | class 1  |
| Calibration pressure                  | Boiler 0.5 MPa (5 bar)<br>Steam boiler 1.6 MPa (16 bar)  |
| Continuous sound pressure level (Lpa) | <70 dB(A) <sup>(4)</sup>   |
| Ambient temperature                   | +5 °C to maximum +35 °C.<br>Empty the water system in case of frost.   |
| Maximum humidity                      | 80% relative humidity without condensation.<br>Do not use device outdoors.   |
| Installation surface / water spray    | The device must be placed and leveled on a horizontal, sturdy, water-resistant, and heatproof base.<br>The device must not be cleaned using a water jet.<br>The device must be installed where it is protected against water spray. The device must not be located on a surface that is sprayed or cleaned with a water hose, steam jets, steam cleaner, or similar devices. |

We reserve the right to make technical modifications.

<sup>(4)</sup> A-evaluated sound pressure level Lpa (slow) and Lpa (impulses) at operating personnel workplace is under 70 dB(A) in any working mode.

|   |  |
|---|--|
| Installation clearances                     | <p>For operating, service, and safety reasons the machine should be installed with a clearance from the building or non-WMF components of not less than 50 mm at the sides and 50 mm at the back.</p> <p>A minimum working space of 800 mm in front of the coffee machine is recommended. Clearance of at least 200 mm above the product hopper is recommended.</p> <p>The height of the installation surface above the floor is at least 850 mm. If the coffee machine connections are to be run downwards through the counter, please make space for the lines, which can reduce the usable space below the machine.</p> |
| Installation dimensions of the water filter | See the User Manual for the water filter.  |

We reserve the right to make technical modifications.

**These specifications for the electrical connection and the standards quoted apply for connecting the coffee machine in EU. It may be necessary to also observe additional country-specific regulations. Outside the EU acceptance of the standards quoted is to be checked by the legal entity or natural person who wishes to use the coffee machine.**

*The customer's on-site electrical system must be designed to meet country-specific regulations per IEC 60364 and must match the information on the rating plate.*

*An isolated ground socket or a country-specific single-phase socket for single-phase connection, or a 5-pole CEE / CEKON socket per DIN EN 50310 VDE 0800-2-310 or a country-specific multi-pole socket for a three-phase connection, must be available near the machine. The sockets are part of the customer's on-site installation. The mains cable must not come into contact with hot surfaces. If the mains cable for this device is damaged then it must be replaced by our service personnel or a similarly qualified person, in order to prevent hazards.*

*In order to avoid possible faults from arising in our shielded data lines due to potential equalisation currents between the devices, an additional potential equalisation unit should be planned for devices connected to the vending system (see DIN EN 50310 VDE 0800-2-310).*

**Appendix: Accessories and spare parts**

| Count  | Unit  | Designation                       | Order No.    | Model                                |
|--|-------|-----------------------------------|--------------|--------------------------------------|
| <b>Coffee spout / milk spout / Choc spout / milk lance</b> |       |                                   |              |                                      |
| 1  | Pcs   | Coffee spout cover                | 33 4055 0000 | all                                  |
| 1  | Pcs   | Coffee spout, double cup          | 33 4054 8000 | all                                  |
| 1  | Pcs   | Choc / Mixer spout (hose)         | 33 4054 0000 | Powder hopper                        |
| 1  | Pcs   | Angle for milk connection, right  | 33 4085 3000 | Basic Milk                           |
| 1  | Pcs   | O-ring (Basic Steam spout)        | 33 2274 0000 | Basic Steam                          |
| 1  | Pcs   | Milk lance                        | 33 2914 9000 | Basic Milk                           |
| 1  | Pcs   | Brush for cleaning the milk lance | 33 4136 8000 | Basic Milk                           |
| <b>Coffee grounds container</b>                            |       |                                   |              |                                      |
| 1  | Pcs   | Grounds container                 | 33 2915 2000 | all                                  |
| 1  | Pcs   | Coffee grounds container slider   | 33 2633 9000 | Grounds disposal through the counter |
| <b>Constant water supply, drainage</b>                     |       |                                   |              |                                      |
| 1  | Pcs   | Permanent water connection kit    | 03 1198 6001 | Constant water                       |
| 1.5  | Meter | Drain tube                        | 00 0048 0042 | Constant water                       |
| <b>Accessories / tools</b>                                 |       |                                   |              |                                      |
| 1  | Meter | Milk hose                         | 00 0048 4948 | Basic Milk                           |
| 1  | Pcs   | Milk connection                   | 33 4089 5000 | Basic Milk                           |
| 1  | Pcs   | Click&Clean hose adapter          | 33 2427 5000 | Basic Milk                           |
| 1  | Pcs   | Foamer suction chamber, green     | 33 4089 7100 | Basic Milk                           |
| 1  | Pcs   | Foamer suction chamber, orange    | 33 4089 7000 | Basic Milk                           |
| 1  | Pcs   | Suction chamber connection        | 33 4054 1000 | Basic Milk                           |
| 1  | Pcs   | O-ring (friction piston)          | 33 7006 5190 | all                                  |
| 1  | Pcs   | Multitool                         | 33 7007 1261 | all                                  |
| <b>Bean hopper / product hopper</b>                        |       |                                   |              |                                      |
| 1  | Pcs   | Bean hopper lid                   | 33 4051 0000 | all                                  |
| 1  | Pcs   | Powder hopper lid                 | 33 4051 0000 | Choc                                 |
| 1  | Pcs   | Powder hopper, no cover           | 33 2916 5000 | all                                  |



| Count   | Unit   | Designation   | Order No.    | Model          |
|---|--------|---|--------------|----------------|
| <b>Brewing unit</b>                           |        |   |              |                |
| 1   | Pcs    | Brewing unit  | 33 2893 0399 | all            |
| 1   | Pcs    | O-ring (water inlet)  | 33 0394 4100 | Constant water |
| 1   | Pcs    | O-ring (coffee spout)   | 33 0398 4000 | all            |
| <b>Drip tray / drip grid</b>                  |        |   |              |                |
| 1   | Pcs    | Drip tray with SteamJet   | 33 4051 1000 | SteamJet       |
| <b>Water tank</b>                             |        |   |              |                |
| 1   | Pcs    | Water tank  | 33 4057 9000 | all            |
| 1   | Pcs    | Water tank lid  | 33 4059 1000 | all            |
| 1   | Pcs    | O-ring (water tank)   | 33 0396 1000 | all            |
| <b>Scale filter / water filter</b>            |        |   |              |                |
| 1   | Pcs    | Bestmax V water filter (complete kit)   | 03 9333 0001 | Constant water |
| 1   | Pcs    | Replacement cartridge for water filter  | 33 2426 5000 | Constant water |
| 1   | Pcs    | Adapter for the water filter in the water tank                                  | 33 2327 1000 | Water tank     |
| 1   | Pack   | Replacement cartridge for the water filter in the water tank (4 pcs in package) | 33 2332 2000 | Water tank     |
| <b>Documentation and instructions</b>         |        |   |              |                |
| 1   | Pcs    | Set of documents:<br>User Manual WMF 1100 S                                     | 33 4097 3010 | all            |
| <b>Order numbers for the WMF care program</b> |        |   |              |                |
| 1   | Bottle | WMF Special cleaner for milk foamer   | 33 0683 6000 | all            |
| 1   | Pack   | Special cleaning tablets (100 pieces)   | 33 2332 4000 | all            |
| 2   | Bottle | Liquid descaling agent  | 33 7006 2869 | all            |
| 1   | Pcs    | Pipe cleaner  | 33 0350 0000 | all            |
| 1   | Pcs    | Cleaning brush  | 33 2408 0000 | all            |
| 1   | Tube   | WMF Molykote "gasket grease"  | 33 2179 9000 | all            |

## Index

---

### A

Accessories and spare parts 112  
Accounting 57  
Accounting PIN 58  
Additions 47  
Animations 43  
Antifreeze 65  
Automatic milk system rinsing 64

---

### B

Barista pad 51  
Barista pad - coffee strength 40  
Basic Steam 30  
Bean hopper extension (optional) 91  
Bean hopper / powder hopper 33  
Beans empty message calibration 64  
Beverage buttons 40  
Beverage dispensing 27  
Beverage pre-selection 55  
Beverages 44  
Beverages: Font + Colour 62  
Bluetooth 66  
Button layout 54  
Button layout overview 59  
Button layout state (timer) 59

---

### C

Caffeine-free 55  
Cancel beverage 27, 55  
Capacity 25  
Carbonate hardness 62  
Care 42, 56, 72  
Care safety instructions 72  
Change recipes 47  
Choc spout 19  
Cleaning intervals 74  
Cleaning PIN 58  
Cleaning programs 75  
CleanLock 43  
Clean the bean hopper 90  
Clean the brewing unit 84  
Clean the catch pan 81  
Clean the drip tray 82  
Clean the grounds container 80  
Clean the housing 83  
Clean the milk system manually 87  
Clean the mixer 89  
Clean the operating panel (CleanLock) 80  
Clean the powder hopper 91  
Clean the spout manually 83, 87  
Clean the water tank 81  
Coffee quality 49  
Coffee spout 19  
Conditions for use and installation 17  
Connect up the milk 28  
Constant water supply 37  
Counter 57

---

Cup size 53  
Cup table 33  
Cup volume 45, 53  
Cup warmer 41  
Current recipe composition 47

---

### D

Data backup 68  
Decaf factor 55  
Descaling 44, 56, 78  
Determine the water hardness 25  
Directives 105  
Dishwasher-safe parts 75  
Dispensing option 46  
Dispensing test 44  
Display 60  
Display background 61  
Display brightness 61  
Display mode 54  
Drip tray 36  
Drip tray sensor 36, 65  
Duties of the owner / operator 106

---

### E

Eco mode 63, 69  
Error message 52  
Error messages and malfunctions 98  
Errors without error message 101  
Event display 61  
Export counters 67

---

### F

Filter capacity 63  
Filter change (optional) 43  
Filter coffee 56  
Firmware update 68  
Foam milk 32  
Freeflow 46

---

### G

General safety instructions 7  
Glossary 21  
Ground coffee quantity 48  
Grounds container 35  
Grounds disposal through the counter (optional) 35

---

### H

HACCP cleaning schedule 93  
HACCP export 68  
Hazards to the coffee machine 103  
Hot water dispensing 30

---

### I

Illumination 60  
Information 56  
Installation clearances 110

---

Installation location 23  
Installation surface 109  
Instructions 43  
Intended use 14  
Introduction 18  
Inventory of factory additions 47

---

### J

Journal 56

---

### L

Language 70  
Language pre-selection 53  
Last brewing cycle 56  
Load beverage symbols 67  
Load data 68  
Load language 68  
Load recipes 45, 67  
Lock recipes 44

---

### M

Main menu functions 39  
Maintenance 95  
Maintenance and descaling 95  
Manual cleaning 80  
Manual insert 34  
Measured total hardness 63  
Menu control pads 39  
Menu pad 19, 52  
Message pad 19  
Messages and instructions 97  
Messages for operation 97  
Messages on the display 39  
Milk and foam 60  
Milk dispensing 29  
Milk foam dispensing 29  
Milk lance 29  
Milk nozzle 28  
Milk quantity 48  
Milk spout 19  
Milk system rinsing 42, 77  
Mixer rinsing 42, 77  
Multiple brewing cycles 46  
Multitool 71

---

### N

Nominal power rating 109  
No warranty is provided: 107

---

### O

Operating elements 51  
Operating options 51  
Operation 26  
Operation safety instructions 26  
Other settings 71  
Overview 38

---

---

**P**

Parts of the coffee machine 18  
PIN rights 58  
Portioner 65  
PostSelection 54  
Preparation of ground coffee using the manual insert 34

---

**Q**

Quality level 49

---

**R**

Ready to operate 38, 40  
"Ready to operate" display 19, 40  
"Ready to operate" display pads 38, 40  
Reduce brightness 61

---

**S**

Safety 7  
Safety devices 7  
Save recipes 67  
SB mode (self service mode) 51  
Selection pads (optional) 27  
Self-service 51  
Service 56  
Set grinding degree 71  
Settings (basic settings) 24  
Settings PIN 58  
S-M-L buttons 27  
S-M-L Cup volumes 46  
S-M-L Function 46, 66  
Software 38  
Spout 19  
Start-Stop 46  
Start-Stop-Freeflow 46  
Start-up 22  
Start-up program 24  
SteamJet 52

---

SteamJet pad 19, 41  
Switch off 37  
Switch-off rinsing 64  
Switch on the coffee machine 26  
System 60  
System cleaning 42, 75, 76  
System recovery 68

---

**T**

Tablet insert 34  
Technical data 108  
Technical data for coffee machine 108  
Temperature 64  
Text and picture 50  
Time/date 59  
Timer 56, 59  
Touch calibration 61  
Transport preparation 65

---

**U**

Unpacking 23  
USB 67  
User Manual Signs and Symbols 20  
User Manual Symbols 20

---

**V**

Vending machines 57

---

**W**

Warm beverages 31  
"Warm rinse" pad 19, 40, 52  
Warranty claims 107  
Water filter 56, 62  
Water quality 108  
Water quantity 48  
Water supply 108  
WMF Service 96

---



Your nearest WMF Service:

© 2017–2018 WMF GmbH

All rights reserved, in particular duplication, distribution, and translation rights. No part of this manual may be reproduced in any form or processed, duplicated, or distributed using electronic systems without written consent.

Design and production / typesetting and print presentation:  
TecDoc GmbH; Geislingen, [info@tecdogmbh.de](mailto:info@tecdogmbh.de)

Original User Manual. Printed in Germany.

We reserve the right to make technical modifications.

23.07.2018

# 1100S