

jura®



Compressor Cooler Pro

Bedienungsanleitung

Instructions for Use

Mode d'emploi

Istruzioni per l'uso

Gebruiksaanwijzing

Manual

Manual de instruções

Bruksanvisning

Руководство по эксплуатации

Typ JURA 570

de

en

fr

it

nl

es

pt

sv

ru

IMPORTANT SAFEGUARDS

Follow the basic safety precautions

When using electrical appliances, basic safety precautions should always be followed, to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- To protect against fire, electric shock and injury to persons, do not immerse cord, plugs, or body of machine in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to »off«, then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- For household use only.

Special cord set instructions

- a. A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a long cord.
 - b. Longer extension cords are available and may be used if care is exercised in their use.
 - c. If an extension cord is used,
 1. the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
 2. if the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord, and
 3. the longer cord shall be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.
- If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.
 - Do not modify the plug in any way or attempt to defeat this safety feature.

SAVE THESE INSTRUCTIONS

Warning

To reduce the risk of fire or electric shock, do not remove any service covers. No user serviceable parts inside. Repair should be done by authorized personnel only.

Caution

This appliance is for household use only. Any servicing other than cleaning and user maintenance should be performed by an authorized service representative:

- Do not immerse base in water or try to disassemble.
- To reduce the risk of fire or electric shock, do not remove the base. No user serviceable parts inside. Repair should be done by authorized service personnel only.
- Check voltage to be sure that the voltage indicated on the name plate agrees with your voltage.
- Keep the cord away from hot parts of the appliance during operation.
- Never clean with scouring powders or hard implements.

NEVER DO (or you will void your warranty protection):

- Never do anything with the appliance which is not described in the User's Manual. In case of doubt, call your dealer.

Your Compressor Cooler Pro

Control elements	15
Important information	16
Proper use	16
For your safety	16
1 Preparation	18
Supplied as standard.....	18
Set-up and connection	18
Connecting machine to IMPRESSA X9	18
Connecting machine to IMPRESSA X7.....	19
2 Cooling milk	19
3 Maintenance and cleaning	20
Maintenance.....	20
Cleaning.....	20
4 Troubleshooting	20
5 Transport and environmentally neutral disposal	20
Transport	20
Disposal	21
6 Technical data	21

Symbol description

Warning:



CAUTION

Always take note of any information marked with the CAUTION or WARNING symbol. The signal word WARNING points out potential risk of serious injury, and the signal word CAUTION potential risk of slight injury.


Symbols used:



Information and tips to make things easier for you as you use your Compressor Cooler Pro.

- ▶ **Prompt to take action.** This symbol means that you are being prompted to perform some action.
-

Control elements

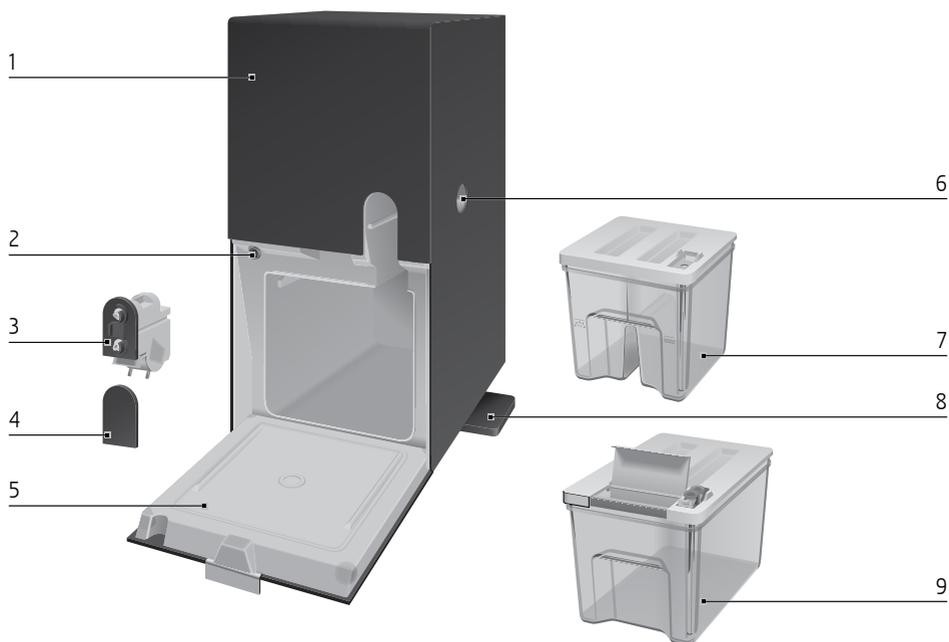

- 1 Compressor Cooler Pro
- 2 On/off button  with operation indicator lamp
- 3 Cartridge with front cover X9
- 4 Front cover X7
- 5 Front flap

- 6 Side opening
- 7 Cleaning container with cover
- 8 Positioning tab
- 9 Milk container with cover and riser pipes fitted

Important information

Proper use

The machine is intended to cool milk in the supplied milk container and keep it fresh for use with a JURA automatic coffee machine. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

Before using the machine always read these instructions for use thoroughly and completely and comply with the instructions they contain. Keep these instructions for use close to the machine and pass them on to the next user if applicable.

For your safety

Please read and note carefully the following important safety information.

To avoid the life-threatening danger of electric shock:

- Never use a machine which has been damaged or with a defective mains cable.
- Never use the machine when you have wet hands.
- Make sure the mains cable is dry before first-time use.
- Only connect the machine to the AC mains power with the mains cable supplied with the machine.
- In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from the mains supply and contact JURA service.
- If the mains cable or the machine is damaged, it must be repaired either directly by JURA or by a JURA authorised service centre.
- Make sure that the machine and the mains cable are not located close to hot surfaces or naked flames.
- Be careful to ensure that the mains cable does not get caught and does not rub against sharp edges.
- Never open and repair the machine yourself. Do not modify the machine in any way that is not described in the instructions for use. The machine contains live parts. Repairs may only be carried out by JURA approved service centres, using original spare parts and accessories.

A defective machine is not safe and could cause injury or fire. To avoid damage and any associated risk of injury or fire:

- Ensure that the ventilation slots are not covered.
- Never allow the mains cable to loosely hang down. The mains cable can be tripped over or damaged.
- Protect the machine from environmental influences such as rain, frost and direct sunlight.
- Do not put the machine, cables or connectors in water.
- Do not put the machine or any individual parts in the dishwasher. The cleaning container and milk container are dishwasher-safe.
- Turn the machine off and disconnect the mains plug before starting any cleaning operation. Always wipe the machine with a damp cloth rather than a wet one, and protect it from prolonged water splash.
- Only connect the machine to the mains voltage in accordance with the information on the rating plate. The rating plate is located on the underside of the machine. Further technical data is given in Chapter 6, 'Technical data'.
- If you are absent for a prolonged period of time, turn the machine off.
- Do not leave the machine unattended when it is in operation.
- Children may not clean or service the machine unless supervised by a responsible person.
- Do not allow children to play with the machine.
- Keep children under the age of 8 away from the machine, or supervise them constantly.
- Children aged 8 and over may only operate the machine without supervision if they have been instructed in how to use it safely. Children must be able to recognise and understand the potential dangers arising from incorrect use.

The machine is only allowed to be used by people who can use it safely. People, including children, who do not have the

- physical, sensory or mental capabilities or
- experience or knowledge to use the machine safely must be supervised by a responsible person when using it, or be instructed in how to use it correctly.

1 Preparation

This chapter provides you with the information you need to prepare your Compressor Cooler Pro step by step for its first use.

Supplied as standard

The following items are supplied as standard:

- Compressor Cooler Pro
- Instructions for use
- Milk container with cover
- Cleaning container with cover
- Mains cable
- Docking cartridge (fitted)
- Milk pipe (2x)
- Riser pipes
- Front cover for IMPRESSA X9
 - with cover (chrome-plated)
- Front cover for IMPRESSA X7

Set-up and connection

When setting up and connecting your Compressor Cooler Pro, please proceed as follows:

- Set the machine down on a horizontal surface that is not sensitive to water.
- Choose a spot for the machine which is protected against overheating.
- Before using your new machine for the first time wipe it carefully on the inside and outside with a damp cloth for reasons of hygiene.

i If the Compressor Cooler Pro has been lying on its side for a long time (e.g. during transport), it must be allowed to stand upright for at least half an hour prior to first-time use.


i Please consult the **rating plate** on the underside of the Compressor Cooler Pro before connecting the machine.

WARNING

If the machine is operated with a defective mains cable, there is a danger of electric shock.

- ▶ Never use a machine which has a defective mains cable.
-


- ▶ Connect the mains cable to the machine.

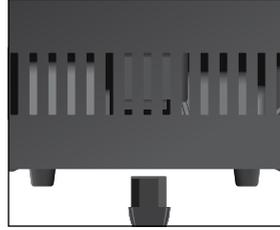

- ▶ Insert the mains plug into a power socket.

Connecting machine to IMPRESSA X9


- ▶ Position the Compressor Cooler Pro to the left of the IMPRESSA X9 with the aid of the positioning tab.
- ▶ Open the front flap.
- ▶ Insert the cartridge.

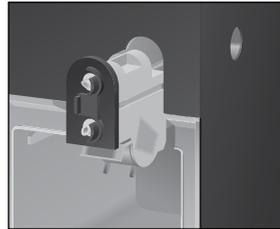


- ▶ Connect the milk pipes to the front cover of the cartridge.
- ▶ Connect the other ends of the milk pipes to the IMPRESSA X9.



- ▶ Fit the chrome-plated cover.

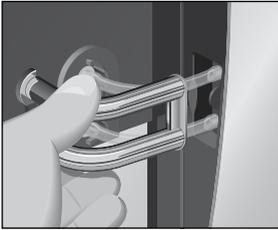


- ▶ Connect the milk pipe to the rear of the cartridge.
- ▶ Insert the cartridge.

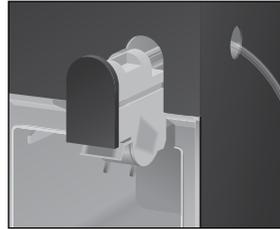


Connecting machine to IMPRESSA X7

- ▶ Open the two snap fastenings on the cartridge.

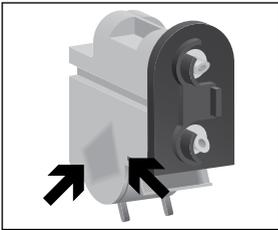


- ▶ Remove the two pipes.
- ▶ Remove the front cover for the IMPRESSA X9.
- ▶ Connect the longer pipe as shown in the illustration.

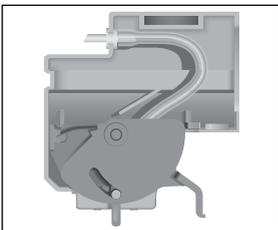

- ▶ Insert the front cover for the IMPRESSA X7.
- ▶ Close the cartridge.
- ▶ Open the front flap of the Compressor Cooler Pro.
- ▶ Guide the milk pipe of the IMPRESSA X7 through the side opening of the Compressor Cooler Pro.
- ▶ Position the Compressor Cooler Pro to the left of the IMPRESSA X7 with the aid of the positioning tab.

2 Cooling milk

- ▶ Fill the milk container with milk.
- ▶ Fit the cover on the milk container.
- ▶ Insert the two riser pipes in the milk container.
- ▶ Open the front flap.
- ▶ Slide the milk container into the Compressor Cooler Pro as far as it will go.
- ▶ Press down the connection tab on the cartridge.

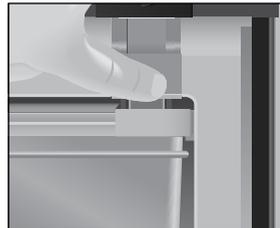

- ▶ Switch the machine on with the on/off button. The operation indicator lamp lights up and the machine starts to cool the milk.
- ▶ Close the front flap.

i The machine switches on and off automatically during cooling. In this way, your Compressor Cooler Pro always keeps the temperature of the milk in the optimum range. The milk cannot freeze.

Compressor Cooler Pro

- i** If you want to stop cooling, press the on/off button.
- i** Condensation may form inside the machine during operation. This should be removed with a cloth.
- i** If the Compressor Cooler Pro will not be used for a long period, leave the front flap open.

3 Maintenance and cleaning

Maintenance

- i** Do not use any sharp, corrosive or abrasive cleaning agents or hard objects for maintenance. These could damage the machine, the individual parts and the plastic container.
- ▶ Before cleaning the machine disconnect the mains plug from the power socket.
- ▶ Wipe the inside and outside of the machine with a damp cloth.
- ▶ Rinse the plastic container and the individual parts thoroughly with running water.

Cleaning

To ensure that the Compressor Cooler Pro works perfectly, you should clean it daily using JURA Cappuccino Cleaner.

- i** JURA Cappuccino Cleaner is available from stockists.
- ▶ Fill the cleaning container on the side marked '☕' with water up to the level indicated and add 1.5 capfuls (max. 15 ml) of Cappuccino Cleaner.
- ▶ Fill the other side (marked '☕') with fresh water up to the level indicated.
- ▶ Open the front flap.
- ▶ Slide the connection tab on the cartridge upwards and remove the milk container.
- ▶ Remove the two riser pipes from the milk container.

- ▶ Place the riser pipes in the cleaning container, on the side with the cleaning solution (indicated by ☕).
- ▶ Slide the cleaning container into the Compressor Cooler Pro as far as it will go.
- ▶ Press down the connection tab on the cartridge.
- ▶ Now start 'Milk system cleaning' (IMPRESSA X7: 'Cappuccino system cleaning') as described in the instructions for use for the coffee machine.
- ▶ As soon as your coffee machine requests fresh water for cleaning, remove the cleaning container.
- ▶ Lift the cover, turn the cleaning container and replace the cover so that the riser pipes are in the fresh water side (indicated by ☕).
- ▶ Slide the cleaning container into the Compressor Cooler Pro as far as it will go.
- ▶ Press down the connection tab on the cartridge.
- ▶ Now continue with 'Milk system cleaning' as described in the instructions for use.

4 Troubleshooting

- The milk container is frozen up.
 - Open the front flap, switch off the Compressor Cooler Pro and wait several minutes.
 - Remove the condensation that forms with a cloth.
- The milk container will not go all the way in.
 - Slide the connection tab on the cartridge upwards.

5 Transport and environmentally neutral disposal

Transport

Keep the packaging of your Compressor Cooler Pro. It should be used to protect the machine during transport.

Clean the milk container before transport.

Disposal

Please dispose of old machines in an environmentally neutral way.



Old machines contain valuable materials capable of being recycled which should be salvaged for recycling. Please therefore dispose of old machines via suitable collection systems.

6 Technical data

i The voltage and frequency will vary depending on the safety test. Please observe the **rating plate** before connecting the machine.

Voltage	230 V AC, 50 Hz
Current	0.6 A
Safety test	CE S
Power	70 W
Temperature range	Cools to 35°C below ambient temperature, but not below 4°C
Weight	18.5 kg
Holding capacity of milk container	4.0 l
Cable length	Approx. 1.8 m
Dimensions (W x H x D)	21 x 45 x 32 cm
Climate class	4 (for ambient temperatures to +30°C)

Technical changes

We reserve the right to make technical changes.

Feedback

Your opinion is important to us!
Use the contact link at www.jura.com.

Copyright

The instructions for use contain information which is protected by copyright. It is not permitted to photocopy or translate these instructions for use into another language without the express written consent of JURA Elektroapparate AG.

JURA Elektroapparate AG
Kaffeeweltstrasse 10
CH-4626 Niederbuchsiten
www.jura.com